



Service Manual

MODELS: GWH(07)UA-K3DNA1A/I
GWH(09)UA-K3DNA1A/I
GWH(12)UB-K3DNA1A/I
GWH(18)UC-K3DNA1A/I
GWH(07)UA-K3DNA1A/I(Cold Plasma)
GWH(09)UA-K3DNA1A/I(Cold Plasma)
GWH(12)UB-K3DNA1A/I(Cold Plasma)
GWH(18)UC-K3DNA1A/I(Cold Plasma)

Table of Contents

Summary and Features 1

1. Safety Precautions 2

2. Specifications 3

 2.1 Unit Specifications 3

 2.2 Noise Criteria Curve Tables for both Models 7

3. Construction Views 8

4. Refrigerant System Diagram 9

5. Schematic Diagram 10

 5.1 Electrical Wiring 10

 5.2 Printed Circuit Board 11

6. Function and Control 13

 6.1 Remote Control Operations 13

 6.2 Description of each Control Operation 17

7. Installation Manual 20

 7.1 Notices for Installation 20

 7.2 Installation Drawing 21

 7.3 Install Indoor Unit 22

 7.4 Check after Installation and Test Operation 24


 7.5 Installation and Maintenance of Healthy Filter 25

| | |
|---|-----------|
| 8. Exploded Views and Parts List | 26 |
| 9. Troubleshooting | 38 |
| 9.1 Malfunction Display of Indoor Unit..... | 38 |
| 9.2 How to Simply Check the Main Part..... | 40 |
| 10. Removal Procedure..... | 49 |

Summary and Features


Indoor Unit:

GWH(07)UA-K3DNA1A/I
GWH(09)UA-K3DNA1A/I
GWH(12)UB-K3DNA1A/I
GWH(18)UC-K3DNA1A/I

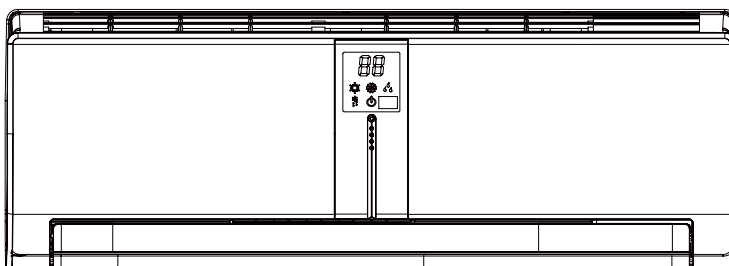

Remote Controller:

 YAA1FB1



1. Safety Precautions

Installing, starting up, and servicing air conditioner can be hazardous due to system pressure, electrical components, and equipment location, etc.

Only trained, qualified installers and service personnel are allowed to install, start-up, and service this equipment. Untrained personnel can perform basic maintenance functions such as cleaning coils. All other operations should be performed by trained service personnel.

When handling the equipment, observe precautions in the manual and on tags, stickers, and labels attached to the equipment. Follow all safety codes. Wear safety glasses and work gloves. Keep quenching cloth and fire extinguisher nearby when brazing.

Read the instructions thoroughly and follow all warnings or cautions in literature and attached to the unit. Consult local building codes and current editions of national as well as local electrical codes.

Recognize the following safety information:



Warning

Incorrect handling could result in personal injury or death.



Caution

Incorrect handling may result in minor injury, or damage to product or property.

- Make sure the outdoor unit is installed on a stable, level surface with no accumulation of snow, leaves, or trash beside.
- Make sure the ceiling/wall is strong enough to bear the weight of the unit.
- Make sure the noise of the outdoor unit does not disturb neighbors.
- Follow all the installation instructions to minimize the risk of damage from earthquakes, typhoons or strong winds.
- Avoid contact between refrigerant and fire as it generates poisonous gas.
- Apply specified refrigerant only. Never have it mixed with any other refrigerant. Never have air remain in the refrigerant line as it may lead to rupture and other hazards.
- Make sure no refrigerant gas is leaking out when installation is completed.
- Should there be refrigerant leakage, the density of refrigerant in the air shall in no way exceed its limited value, or it may lead to explosion.
- Keep your fingers and clothing away from any moving parts.
- Clear the site after installation. Make sure no foreign objects are left in the unit.
- Always ensure effective grounding for the unit.



Warning

All electric work must be performed by a licensed technician according to local regulations and the instructions given in this manual.

- Before installing, modifying, or servicing system, main electrical disconnect switch must be in the OFF position. There may be more than 1 disconnect switch. Lock out and tag switch with a suitable warning label.
- Never supply power to the unit unless all wiring and tubing are completed, reconnected and checked.
- This system adopts highly dangerous electrical voltage. Incorrect connection or inadequate grounding can cause personal injury or death. Stick to the wiring diagram and all the instructions when wiring.
- Have the unit adequately grounded in accordance with local electrical codes.
- Have all wiring connected tightly. Loose connection may lead to overheating and a possible fire hazard.

All installation or repair work shall be performed by your dealer or a specialized subcontractor as there is the risk of fire, electric shock, explosion or injury.



Caution

- Never install the unit in a place where a combustible gas might leak, or it may lead to fire or explosion.
- Make a proper provision against noise when the unit is installed at a telecommunication center or hospital.
- Provide an electric leak breaker when it is installed in a watery place.
- Never wash the unit with water.
- Handle unit transportation with care. The unit should not be carried by only one person if it is more than 20kg.
- Never touch the heat exchanger fins with bare hands.
- Never touch the compressor or refrigerant piping without wearing glove.
- Do not have the unit operate without air filter.
- Should any emergency occur, stop the unit and disconnect the power immediately.
- Properly insulate any tubing running inside the room to prevent the water from damaging the wall.

2. Specifications

2.1 Unit Specifications

| Model | | GWH(07)UA-K3DNA1A/I | GWH(07)UA-K3DNA1A/I (Cold Plasma) |
|---|-------------------|----------------------------------|--------------------------------------|
| Product Code | | CB204N01800 | CB204N01801 |
| Rated Voltage | V | 220-240 | 220-240 |
| Rated Frequency | Hz | 50 | 50 |
| Phases | | 1 | 1 |
| Min/Max Voltage | V | 198/264 | 198/264 |
| Cooling Capacity | KW | 2.1 | 2.1 |
| Heating Capacity | KW | 2.6 | 2.6 |
| Air flow volume(max~min) | m ³ /h | 450/420/380/330/300/280/260 | 450/420/380/330/300/280/260 |
| Dehumidifying Volume | L/h | 0.8 | 0.8 |
| Fan Type | | Cross-flow | Cross-flow |
| Fan Diameter-height | mm | Φ81X643 | Φ81X643 |
| Cooling Fan Motor Speed(max~min) | rpm | 1400/1200/1100/1000/900/800/700 | 1400/1200/1100/1000/900/800/700 |
| Heating Fan Motor Speed(max~min) | rpm | 1380/1250/1170/1090/1020/950/900 | 1380/1250/1170/1090/1020/950/900 |
| Fan Motor Power Output | W | 10 | 10 |
| Fan motor Running Current | A | 0.13 | 0.13 |
| Fan Motor Capacitor | μF | 1 | 1 |
| Evaporator Material | | Aluminum Fin-copper Tube | Aluminum Fin-copper Tube |
| Evaporator Pipe Diameter | mm | Φ7 | Φ7 |
| Evaporator Number of Rows-Fin Pitch | mm | 2-1.5 | 2-1.5 |
| Evaporator Length(L) X Height(H) X Width(W) | mm | 635X286X25.4 | 635X286X25.4 |
| Fuse Current | A | 3.15 | 3.15 |
| Sound Pressure Level (max~min) | dB(A) | 37/35/32/30/28/26/24 | 37/35/32/30/28/26/24 |
| Sound Power Level (max~min) | dB(A) | 47/45/42/40/38/36/34 | 47/45/42/40/38/36/34 |
| Dimension of Outline (WXHxD) | mm | 860X153X299 | 860X153X299 |
| Dimension of Carton Box (LXWXH) | mm | 941X383X232 | 941X383X232 |
| Dimension of Package (LXWXH) | mm | 944X386X247 | 944X386X247 |
| Net Weight | kg | 9.5 | 9.5 |
| Gross Weight | kg | 12.5 | 12.5 |
| Liquid pipe | mm | Φ6 | Φ6 |
| Gas Pipe(to indoor unit) | mm | Φ9.52 | Φ9.52 |

The above data is subject to change without notice. Please refer to the nameplate of the unit.

| | | | |
|---|-------------------|----------------------------------|--------------------------------------|
| Model | | GWH(09)UA-K3DNA1A/I | GWH(09)UA-K3DNA1A/I (Cold Plasma) |
| Product Code | | CB204N01900 | CB204N01901 |
| Rated Voltage | V | 220-240 | 220-240 |
| Rated Frequency | Hz | 50 | 50 |
| Phases | | 1 | 1 |
| Min/Max Voltage | V | 198/264 | 198/264 |
| Cooling Capacity | KW | 2.6 | 2.6 |
| Heating Capacity | KW | 2.8 | 2.8 |
| Air flow volume(max~min) | m ³ /h | 450/420/380/330/300/280/260 | 450/420/380/330/300/280/260 |
| Dehumidifying Volume | L/h | 0.8 | 0.8 |
| Fan Type | | Cross-flow | Cross-flow |
| Fan Diameter-height | mm | Φ81X643 | Φ81X643 |
| Cooling Fan Motor Speed(max~min) | rpm | 1400/1200/1100/1000/900/800/700 | 1400/1200/1100/1000/900/800/700 |
| Heating Fan Motor Speed(max~min) | rpm | 1380/1250/1170/1090/1020/950/900 | 1380/1250/1170/1090/1020/950/900 |
| Fan Motor Power Output | W | 10 | 10 |
| Fan motor Running Current | A | 0.13 | 0.13 |
| Fan Motor Capacitor | μF | 1 | 1 |
| Evaporator Material | | Aluminum Fin-copper Tube | Aluminum Fin-copper Tube |
| Evaporator Pipe Diameter | mm | Φ7 | Φ7 |
| Evaporator Number of Rows-Fin Pitch | mm | 2-1.5 | 2-1.5 |
| Evaporator Length(L) X Height(H) X Width(W) | mm | 635X286X25.4 | 635X286X25.4 |
| Fuse Current | A | 3.15 | 3.15 |
| Sound Pressure Level (max~min) | dB(A) | 38/35/32/30/28/26/24 | 38/35/32/30/28/26/24 |
| Sound Power Level (max~min) | dB(A) | 48/45/42/40/38/36/34 | 48/45/42/40/38/36/34 |
| Dimension of Outline (WXHXD) | mm | 860X153X299 | 860X153X299 |
| Dimension of Carton Box (LXWXH) | mm | 941X383X232 | 941X383X232 |
| Dimension of Package (LXWXH) | mm | 944X386X247 | 944X386X247 |
| Net Weight | kg | 9.5 | 9.5 |
| Gross Weight | kg | 12.5 | 12.5 |
| Liquid pipe | mm | Φ6 | Φ6 |
| Gas Pipe(to indoor unit) | mm | Φ9.52 | Φ9.52 |

The above data is subject to change without notice. Please refer to the nameplate of the unit.


| | | | |
|---|-------------------|----------------------------------|--------------------------------------|
| Model | | GWH(12)UB-K3DNA1A/I | GWH(12)UB-K3DNA1A/I (Cold Plasma) |
| Product Code | | CB204N02000 | CB204N02001 |
| Rated Voltage | V | 220-240 | 220-240 |
| Rated Frequency | Hz | 50 | 50 |
| Phases | | 1 | 1 |
| Min/Max Voltage | V | 198/264 | 198/264 |
| Cooling Capacity | KW | 3.5 | 3.5 |
| Heating Capacity | KW | 3.8 | 3.8 |
| Air flow volume(max~min) | m ³ /h | 560/440/400/350/320/300/280 | 560/440/400/350/320/300/280 |
| Dehumidifying Volume | L/h | 1.4 | 1.4 |
| Fan Type | | Cross-flow | Cross-flow |
| Fan Diameter-height | mm | Φ85X687 | Φ85X687 |
| Cooling Fan Motor Speed(max~min) | rpm | 1400/1250/1150/1050/950/850/700 | 1400/1250/1150/1050/950/850/700 |
| Heating Fan Motor Speed(max~min) | rpm | 1400/1270/1180/1100/1040/980/900 | 1400/1270/1180/1100/1040/980/900 |
| Fan Motor Power Output | W | 20 | 20 |
| Fan motor Running Current | A | 0.2 | 0.2 |
| Fan Motor Capacitor | μF | 1 | 1 |
| Evaporator Material | | Aluminum Fin-copper Tube | Aluminum Fin-copper Tube |
| Evaporator Pipe Diameter | mm | Φ7 | Φ7 |
| Evaporator Number of Rows-Fin Pitch | mm | 2-1.4 | 2-1.4 |
| Evaporator Length(L) X Height(H) X Width(W) | mm | 670X324X25.4 | 670X324X25.4 |
| Fuse Current | A | 3.15 | 3.15 |
| Sound Pressure Level (max~min) | dB(A) | 39/36/34/31/28/27/23 | 39/36/34/31/28/27/23 |
| Sound Power Level (max~min) | dB(A) | 49/46/44/41/38/37/33 | 49/46/44/41/38/37/33 |
| Dimension of Outline (WXHxD) | mm | 896X159X320 | 896X159X320 |
| Dimension of Carton Box (LXWXH) | mm | 970X400X240 | 970X400X240 |
| Dimension of Package (LXWXH) | mm | 973X403X255 | 973X403X255 |
| Net Weight | kg | 11.5 | 11.5 |
| Gross Weight | kg | 14.5 | 14.5 |
| Liquid pipe | mm | Φ6 | Φ6 |
| Gas Pipe(to indoor unit) | mm | Φ9.52 | Φ9.52 |

The above data is subject to change without notice. Please refer to the nameplate of the unit.





| Model | | GWH(18)UC-K3DNA1A/I | GWH(18)UC-K3DNA1A/I (Cold Plasma) |
|---|-------------------|----------------------------------|--------------------------------------|
| Product Code | | CB204N02100 | CB204N02101 |
| Rated Voltage | V | 220-240 | 220-240 |
| Rated Frequency | Hz | 50 | 50 |
| Phases | | 1 | 1 |
| Min/Max Voltage | V | 198/264 | 198/264 |
| Cooling Capacity | KW | 5.3 | 5.3 |
| Heating Capacity | KW | 5.8 | 5.8 |
| Air flow volume(max~min) | m ³ /h | 850/800/750/680/600/550/450 | 850/800/750/680/600/550/450 |
| Dehumidifying Volume | L/h | 1.8 | 1.8 |
| Fan Type | | Cross-flow | Cross-flow |
| Fan Diameter-height | mm | Φ98X765 | Φ98X765 |
| Cooling Fan Motor Speed(max~min) | rpm | 1400/1150/1070/1000/950/900/850 | 1400/1150/1070/1000/950/900/850 |
| Heating Fan Motor Speed(max~min) | rpm | 1400/1150/1080 /1020/950/900/850 | 1400/1150/1080 /1020/950/900/850 |
| Fan Motor Power Output | W | 25 | 25 |
| Fan motor Running Current | A | 0.31 | 0.31 |
| Fan Motor Capacitor | μF | 2.5 | 2.5 |
| Evaporator Material | | Aluminum Fin-copper Tube | Aluminum Fin-copper Tube |
| Evaporator Pipe Diameter | mm | Φ7 | Φ7 |
| Evaporator Number of Rows-Fin Pitch | mm | 2-1.5 | 2-1.5 |
| Evaporator Length(L) X Height(H) X Width(W) | mm | 770X343X25.4 | 770X343X25.4 |
| Fuse Current | A | 3.15 | 3.15 |
| Sound Pressure Level (max~min) | dB(A) | 44/40/37/35/33/31/28 | 44/40/37/35/33/31/28 |
| Sound Power Level (max~min) | dB(A) | 54/50/47/45/43/41/38 | 54/50/47/45/43/41/38 |
| Dimension of Outline (WXHxD) | mm | 998X178X340 | 998X178X340 |
| Dimension of Carton Box (LXWXH) | mm | 1080X425X268 | 1080X425X268 |
| Dimension of Package (LXWXH) | mm | 1083X428X283 | 1083X428X283 |
| Net Weight | kg | 15 | 15 |
| Gross Weight | kg | 19 | 19 |
| Liquid pipe | mm | Φ6 | Φ6 |
| Gas Pipe(to indoor unit) | mm | Φ12 | Φ12 |

The above data is subject to change without notice. Please refer to the nameplate of the unit.

2.2 Noise Criteria Curve Tables for both Models

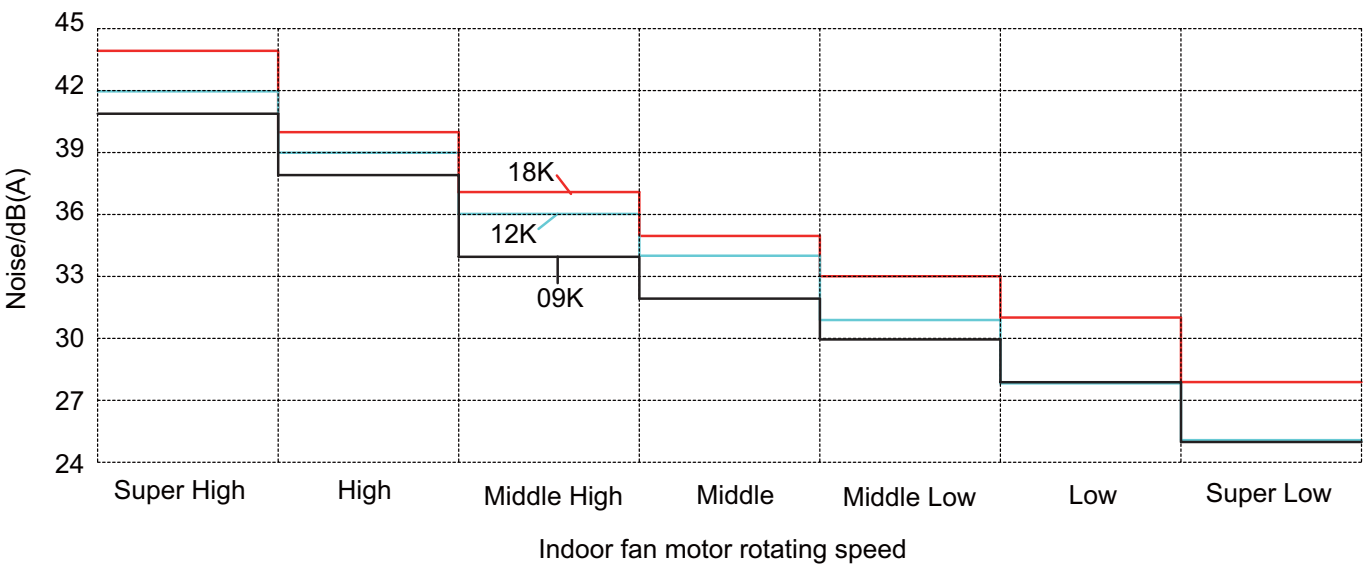


3. Construction Views

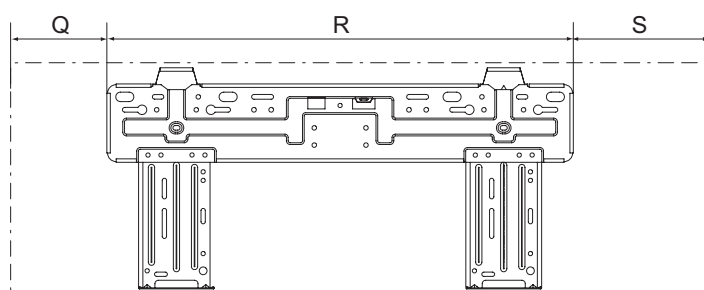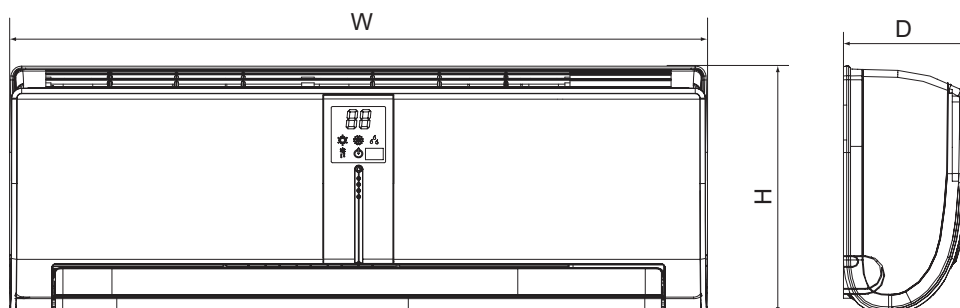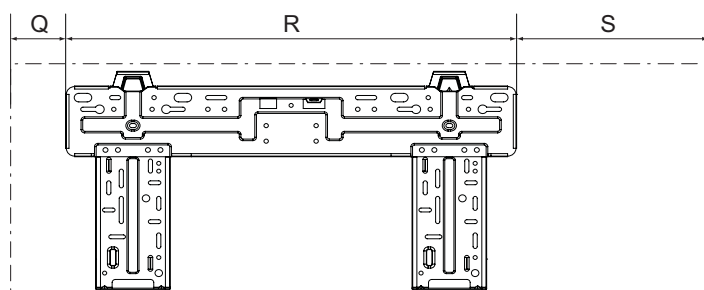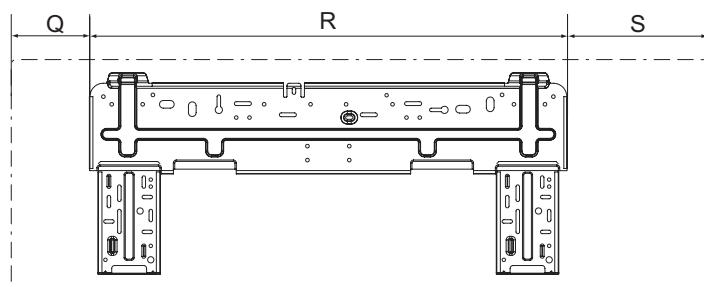**07K & 09K****12K****18K**

| Model | W | H | D | Q | R | S |
|-----------|-----|-----|-----|-----|-----|-----|
| 07K & 09K | 860 | 299 | 153 | 118 | 542 | 200 |
| 12K | 896 | 320 | 159 | 64 | 542 | 290 |
| 18K | 998 | 340 | 178 | 112 | 685 | 201 |

Unit: mm

4. Refrigerant System Diagram

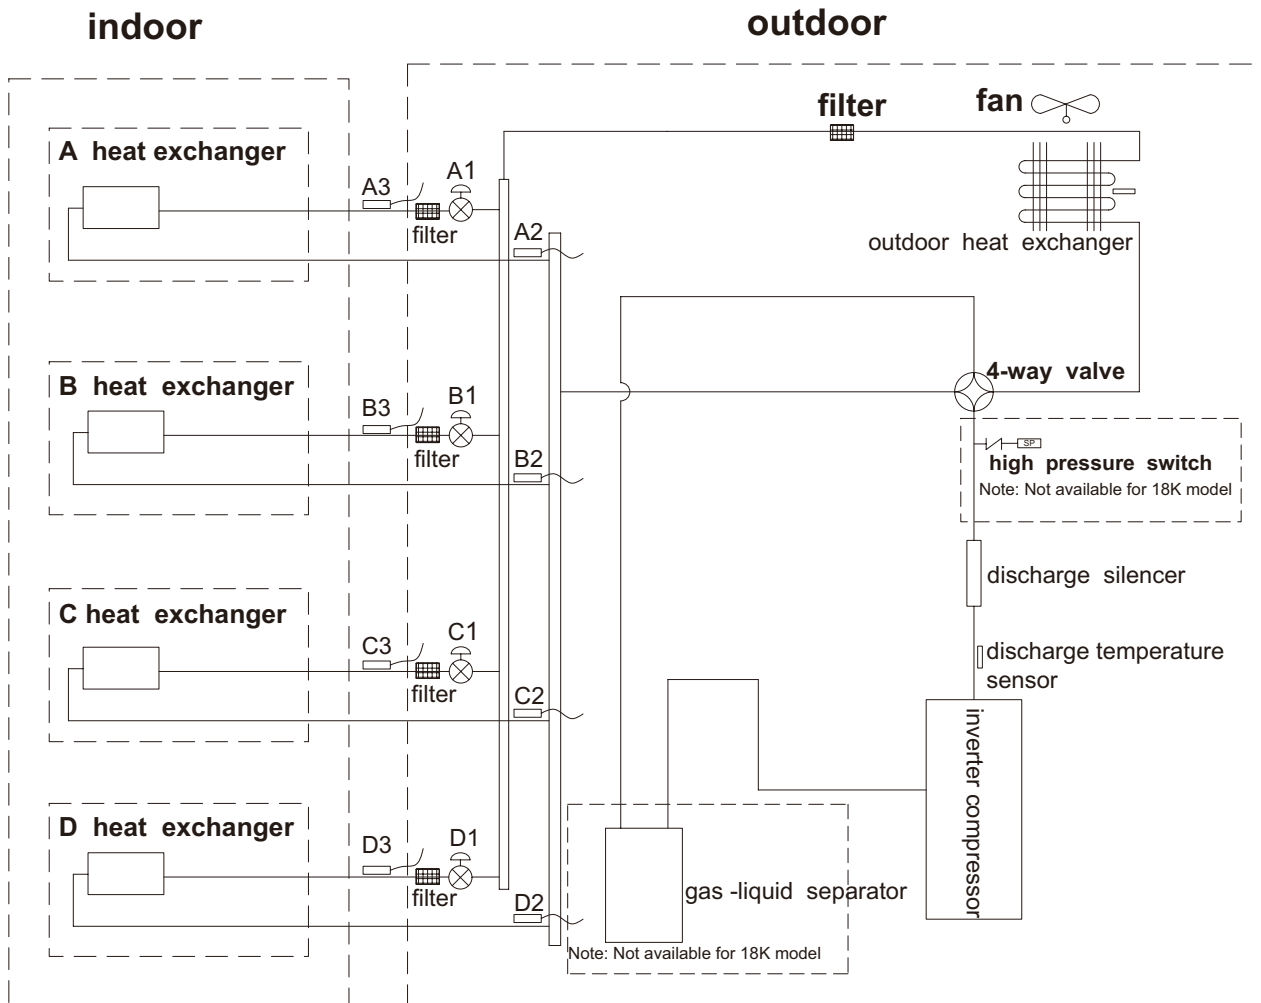


A1:A-unit electronic expansion valve B1:B-unit electronic expansion valve
C1:C-unit electronic expansion valve D1:D-unit electronic expansion valve
A2:A-unit gas pipe temperature sensor B2:B-unit gas pipe temperature sensor
C2:C-unit gas pipe temperature sensor D2:D-unit gas pipe temperature sensor
A3:A-unit liquid pipe temperature sensor B3:B-unit liquid pipe temperature sensor
C3:C-unit liquid pipe temperature sensor D3:D-unit liquid pipe temperature sensor

5. Schematic Diagram

5.1 Electrical Wiring

GWH(07)UA-K3DNA1A/I(CB204N01800) GWH(09)UA-K3DNA1A/I(CB204N01900)


GWH(12)UB-K3DNA1A/I(CB204N02000) GWH(18)UC-K3DNA1A/I(CB204N02100)

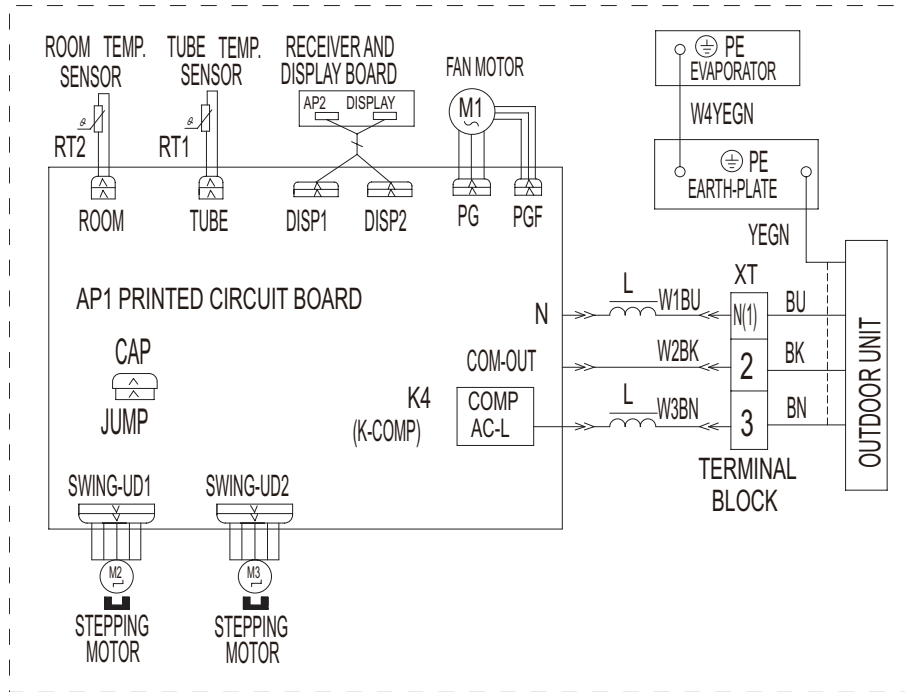

| Symbol | Color symbol |
|--------|------------------|
| OG | ORANGE |
| VT | VIOLET |
| WH | WHITE |
| YE | YELLOW |
| RD | RED |
| YEGN | YELLOW GREEN |
| SAT | OVERLOAD |
| BN | BROWN |
| BU | BLUE |
| BK | BLACK |
| Symbol | Parts name |
| | PROTECTIVE EARTH |
| COMP | COMPRESSOR |

GWH(07)UA-K3DNA1A/I(CB204N01801) GWH(09)UA-K3DNA1A/I(CB204N01901)

GWH(12)UB-K3DNA1A/I(CB204N02001) GWH(18)UC-K3DNA1A/I(CB204N02101)

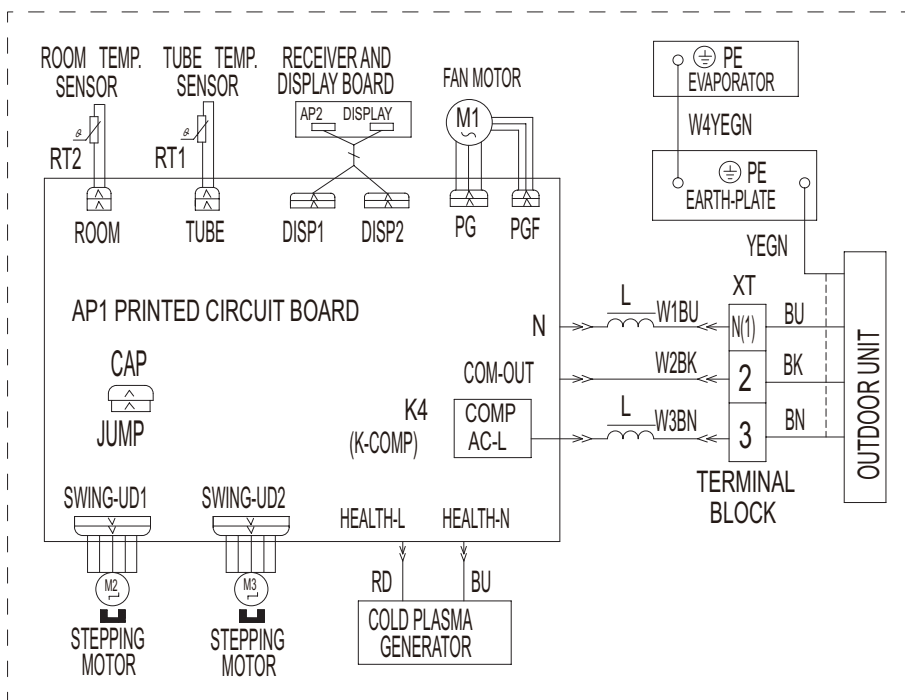


These circuit diagrams are subject to change without notice. Please refer to the one supplied with the unit.


5.2 Printed Circuit Board

GWH(07)UA-K3DNA1A/I GWH(09)UA-K3DNA1A/I GWH(12)UB-K3DNA1A/I

● TOP VIEW

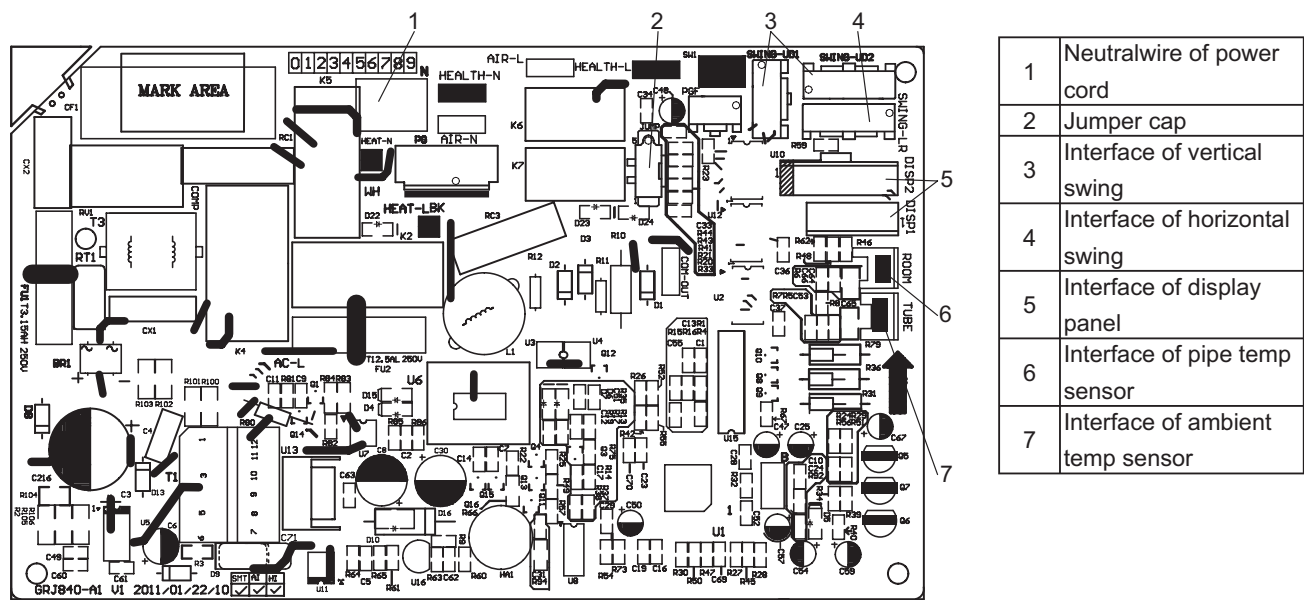


● BOTTOM VIEW

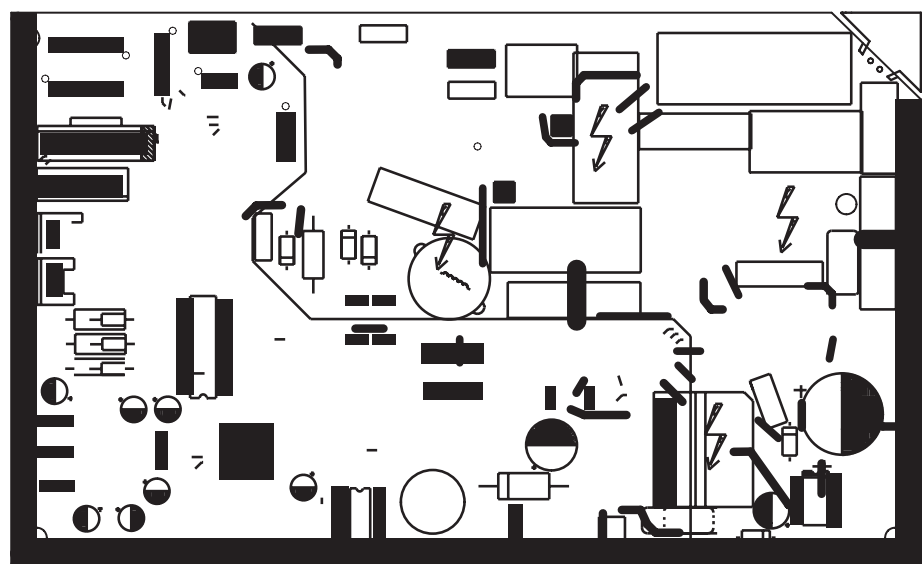


GWH(18)UC-K3DNA1A/I

● TOP VIEW

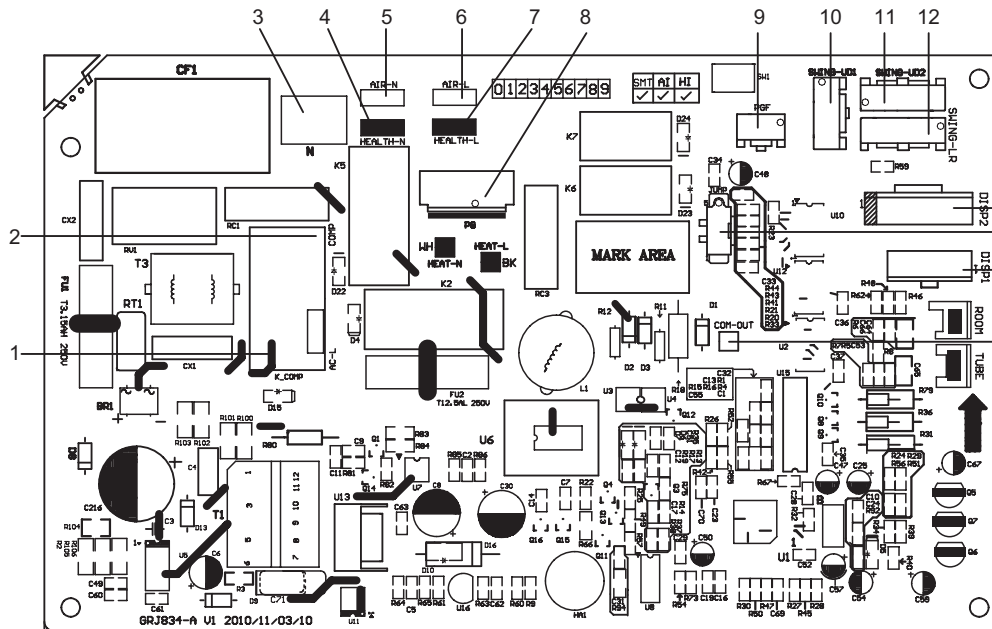

| | |
|----|---|
| 1 | Wiring terminal of live wire of power supply, connecting to live wire of power cord |
| 2 | Wiring terminal of live wire of power supply, connecting to live wire of outdoor unit |
| 3 | Wiring terminal of live wire of power supply |
| 4 | Neutral wire terminal of cold plasma |
| 5 | Neutral wire terminal for air change |
| 6 | Live wire terminal for air change |
| 7 | Live wire terminal of cold plasma |
| 8 | Wiring terminal of PG motor |
| 9 | Feedback terminal of PG motor |
| 10 | Terminal 1 for vertical swing |
| 11 | Terminal 2 for vertical swing |
| 12 | Terminal for horizontal swing |
| 13 | 7-pin wiring terminal of display |
| 14 | Terminal of jumper cap |
| 15 | 6-pin wiring terminal of display |
| 16 | Wiring terminal of communication wire |

● BOTTOM VIEW

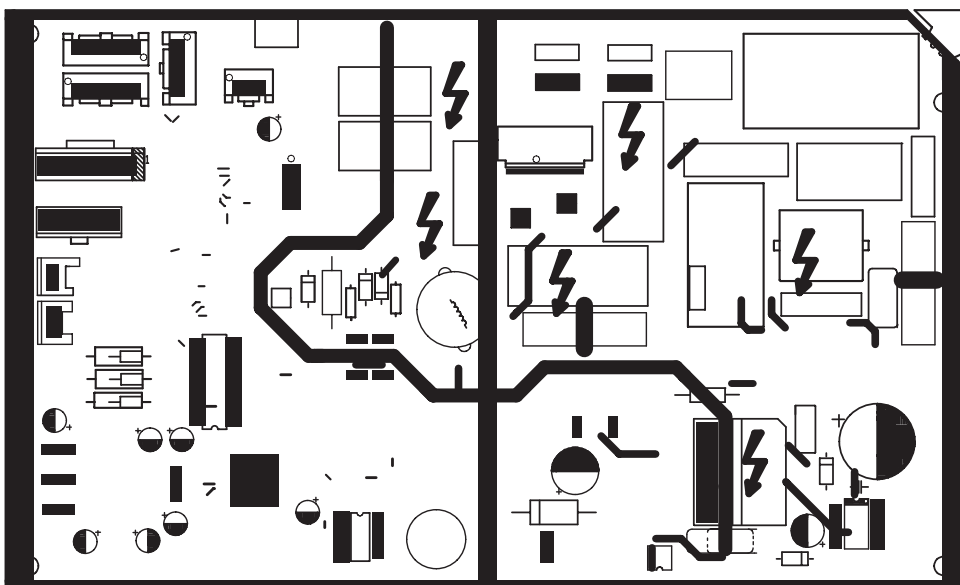

6. Function and Control

6.1 Remote Control Operations



- 1 ON/OFF**
Press it to start or stop operation.
- 2 -**
Press it to decrease temperature setting.
- 3 +**
Press it to increase temperature setting.
- 4 MODE**
Press it to select operation mode(AUTO/COOL/DRY/FAN/HEAT).
- 5 FAN**
Press it to set fan speed.
- 6 SWING**
Press it set swing angle.
- 7 I FEEL**
- 8 HEALTH/AIR icon**
Press it to set HEALTH or AIR function.
- 9 SLEEP**
- 10 TEMP**
- 11 QUIET**
Press it to set QUIET function.
- 12 CLOCK**
Press it set clock.
- 13 T-ON/T-OFF**
Press it to set auto-off/auto-on timer.
- 14 TURBO**
- 15 LIGHT**
Press it to turn on/off the light.
- 16 X-FAN**

1 ON/OFF

Press this button to turn on the unit .Press this button again to turn off the unit.

2 -

Press this button to decrease set temperature. Holding it down above 2 seconds rapidly decreases set temperature. In AUTO mode, set temperature is not adjustable.

3 +

Press this button to increase set temperature.Holding it down above 2 seconds rapidly increases set temperature. In AUTO mode, set temperature is not adjustable.

4 MODE

Each time you press this button, a mode is selected in a sequence that goes from AUTO, COOL, DRY, FAN, and HEAT *, as the following:

AUTO ► COOL ► DRY ► FAN ► HEAT*



*Note: Only for models with heating function.

After energization, AUTO mode is defaulted. In AUTO mode, the set temperature will not be displayed on the LCD, and the unit will automatically select the suitable operation mode in accordance with the room temperature to make indoor room comfortable.

5 FAN

This button is used for setting Fan Speed in the sequence that goes from AUTO, , , , , , to then back to Auto.



 
Low speed Low-Medium speed Medium speed
 Medium-High speed High speed

6 SWING

Press this button to set up & down swing angle, which circularly changes as below:



This remote controller is universal. If any command , or is sent out, the unit will carry out the command as .
 indicates the guide louver swings as:



7 I FEEL

Press this button to turn on I FEEL function. The unit automatically adjust temperature according to the sensed temperature. Press this button again to cancel I FEEL function.

8

Press this button to achieve the on and off of healthy and scavenging functions in operation status. Press this button for the first time to start scavenging function; LCD displays "". Press the button for the second time to start healthy and scavenging functions simultaneously; LCD displays " " and "". Press this button for the third time to quit healthy and scavenging functions simultaneously. Press the button for the fourth time to start healthy function; LCD display "". Press this button again to repeat the operation above.

9 SLEEP






- Press this button, can select Sleep 1 (), Sleep 2 (), Sleep 3 () and cancel the Sleep, circulate between these, after electrified, Sleep Cancel is defaulted.
- Sleep 1 is Sleep mode 1, in Cool, Dehumidify modes: sleep status after run for one hour, the main unit setting temperature will increase 1 °C, setting temperature increased 2 °C, the unit will run at this setting temperature; In Heat mode: sleep status after run for one hour, the setting temperature will decrease 1 °C, 2 hours, setting temperature will decrease 2 °C, then the unit will run at this setting temperature.
- Sleep 2 is sleep mode 2, that is air conditioner will run according to the presetting a group of sleep temperature curve.
- Sleep 3- the sleep curve setting under Sleep mode by DIY:
 - (1) Under Sleep 3 mode, press "Turbo" button for a long time, remote control enters into user individuation sleep setting status, at this time, the time of remote control will display "1hour", the setting temperature "88" will display the corresponding temperature of last setting sleep curve and blink (The first entering will display according to the initial curve setting value of original factory);
 - (2) Adjust "+" and "-" button, could change the corresponding setting temperature, after adjusted, press "Turbo" button for confirmation;
 - (3) At this time, 1hour will be automatically increased at the timer position on the remote control, (that are "2hours" or "3hours" or "8hours"), the place of setting temperature "88" will display the corresponding temperature of last setting sleep curve and blink;
 - (4) Repeat the above step (2) ~ (3) operation, until 8hours temperature setting finished, sleep curve setting finished, at this time, the remote control will resume the original timer display; temperature display will resume to original setting temperature.
- Sleep3- the sleep curve setting under Sleep mode by DIY could be inquired:

The user could accord to sleep curve setting method to inquire the presetting sleep curve, enter into user individuation sleep setting status, but do not change the temperature, press "Turbo" button directly for confirmation. Note: In the above presetting or enquiry procedure, if continuously within 10s, there is no button pressed, the sleep curve setting status will be automatically quit and resume to display the original displaying. In the presetting or enquiry procedure, press "ON/OFF" button, "Mode" button, "Timer" button or "Sleep" button, the sleep curve setting or enquiry status will quit similarly.



10 TEMP

Press this button, could select displaying the indoor setting temperature or indoor ambient temperature. When the indoor unit firstly power on it will display the setting temperature, if the temperature's displaying status is changed from other status to " ", displays the ambient temperature, 5s later or within 5s, it receives other remote control signal that will return to display the setting temperature. if the users haven't set up the temperature displaying status, that will display the setting temperature.


11 QUIET

Press this button, the Quiet status is under the Auto Quiet mode (display "  "signal) and Quiet mode (display "  " signal) and Quiet OFF (there is no signal of "  " displayed), after powered on, the Quiet OFF is defaulted. Note: the Quiet function cannot be set up in Fan and Dry mode; Under the Quiet mode (Display "  " Under the Quiet mode (Display "  " signal), the fan speed is not available.

12 CLOCK

Press CLOCK button, blinking  . Within 5 seconds, pressing + or - button adjusts the present time. Holding down either button above 2 seconds increases or decreases the time by 1 minute every 0.5 second and then by 10 minutes every 0.5 second. During blinking after setting, press CLOCK button again to confirm the setting, and then  will be constantly displayed.



13 T-ON/T-OFF

Press T-ON button to initiate the auto-ON timer. To cancel the auto-timer program, simply press this button again. After press of this button,  disappears and "ON" blink s .00:00 is displayed for ON time setting. Within 5 seconds, press + or - button to adjust the time value. Every press of either button changes the time setting by 1 minute. Holding down either button rapidly changes the time setting by 1 minute and then 10 minutes. Within 5 Seconds after setting, press TIMER ON button to confirm. Press T-OFF button to initiate the auto-off timer. To cancel the auto-timer program, simply press the button again. TIMER OFF setting is the same as TIMER ON.


14 TURBO

Press this button to activate / deactivate the Turbo function which enables the unit to reach the preset temperature in the shortest time. In COOL mode, the unit will blow strong cooling air at super high fan speed. In HEAT mode, the unit will blow strong heating air at super high fan speed.



15 LIGHT

Press LIGHT button to turn on the display's light and press this button again to turn off the display's light. If the light is turned on,  is displayed. If the light is turned off,  disappears.

16 X-FAN

Pressing X-FAN button in COOL or DRY mode, the icon  is displayed and the indoor fan will continue operation for 10 minutes in order to dry the indoor unit even though you have turned off the unit. After energization, X-FAN OFF is defaulted. X-FAN is not available in AUTO, FAN or HEAT mode.


17 Combination of "+" and "-" buttons: About lock

Press "+" and "-" buttons simultaneously to lock or unlock the keypad. If the remote controller is locked,  is displayed. In this case, pressing any button,  blinks three times.

18 Combination of "MODE" and "-" buttons : About switch between Fahrenheit and centigrade At unit OFF, press "MODE" and " - " buttons simultaneously to switch between $^{\circ}\text{C}$ and $^{\circ}\text{F}$.**19 Combination of "TEMP" and "CLOCK" buttons : About Energy-saving Function**

Press "TEMP" and "CLOCK" simultaneously in COOL mode to start energy-saving function. Nixie tube on the remote controller displays "SE". Repeat the operation to quit the function.

20 Combination of "TEMP" and "CLOCK" buttons : About 8 $^{\circ}\text{C}$ Heating Function

Press "TEMP" and "CLOCK" simultaneously in HEAT mode to start 8 $^{\circ}\text{C}$ Heating Function Nixie tube on the remote controller displays "  " and a selected temperature of " 8 $^{\circ}\text{C}$ ". (46 $^{\circ}\text{F}$ if Fahrenheit is adopted). Repeat the operation to quit the function.

21 About Back-lighting Function


The unit lights for 4s when energizing for the first time, and 3s for later press.

Replacement of Batteries

1. Remove the battery cover plate from the rear of the remote controller.
(As shown in the figure)
2. Take out the old batteries.
3. Insert two new AAA1.5V dry batteries, and pay attention to the polarity.
4. Reinstall the battery cover plate.

★Notes:

- When replacing the batteries, do not use old or different types of batteries,
- If the remote controller will not be used for a long time, please remove batteries to prevent batteries from leaking.
- The operation should be performed in its receiving range.
- It should be kept 1m away from the TV set or stereo sound sets.
- If the remote controller does not operate normally, please take the batteries out and reinsert them after 30 seconds. If it still can't operate properly, replace the batteries.

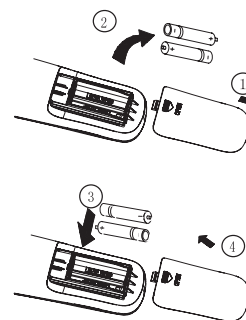

Sketch map for
replacing batteries

6.2 Description of each Control Operation


I. Basic Operation Mode

1. Cool; 2. Dry; 3. Heat; 4. Auto; 5. Fan

II. Basic Functions

1. Cooling Only

(1) Under this mode, fan and swing run at preset status, the temperature setting range is 16-30°C .

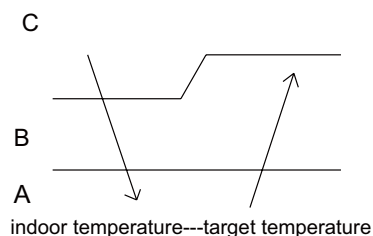

(2) Under malfunction for outdoor unit and protection stop, the indoor unit runs with the original status, and display malfunction.

(3) The indoor fan stops when the modes conflict with each other.


2. Dry Mode

(1) Under this mode, the indoor fan runs with low speed, and swing runs at preset status, the temperature setting range is 16-30°C .

(2) Under malfunction for outdoor unit and protection stop, the indoor unit runs with the original status, and display malfunction.

3. Heating Mode

(1) Under this mode, the temperature setting range is 16-30°C .

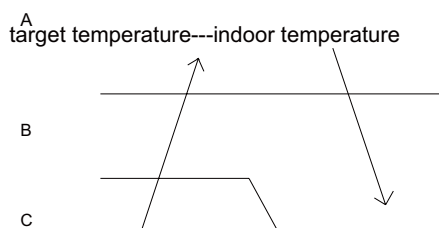

(2) Working condition and Process of Heating

When the unit is ON and in heating mode, indoor fan starts cold air prevention operation; when the unit is off and the indoor fan runned before, it blows residual heat.

(3) Protection Function. The compressor stops as the malfunction (including any temperature sensor malfunction) in heating mode, the indoor fan runs with blowing residual heat.

(4) Defrosting and Oil Return


Once defrosting signal of outdoor unit is received, H1 will be displayed.

4. Working Methods of Auto Mode

1) When $T_{amb} \geq 26^{\circ}\text{C}$ (79°F), it operates in Cool mode.

2) For heat pump unit, when $T_{amb} \leq 22^{\circ}\text{C}$, it operates in Heat mode.

3) When $22^{\circ}\text{C} < T_{amb} < 26^{\circ}\text{C}$, it operates in auto fan mode upon initial startup of the unit. When changing to auto mode from other modes, it will keep the previous operation mode (when it enter Dry mode, it operates in auto fan mode.).

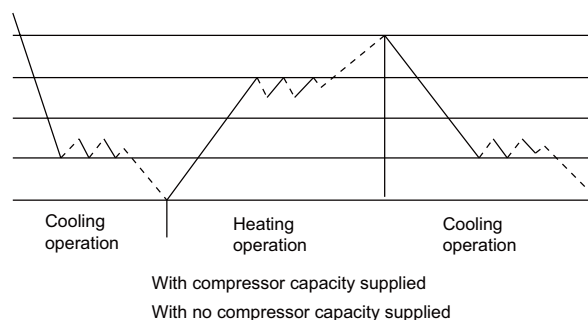

5. Fan Mode

Only indoor fan operates in Fan mode. Under auto fan speed, it runs in cooling auto fan mode.

III. Other Control

1. Buzzer

The buzzer will give out a beep when the controller is energized, receiving signal from remote controller and auto button.

2. Auto Button

Press this button once, it will operate in Auto mode, and indoor fan operates in Auto fan mode and swing. When the unit is on, pressing this button will turn off the unit.

3. Auto Fan

a. Auto fan speed in Heat mode When $T_{amb} \leq T_{preset} - 2^{\circ}\text{C}$, the indoor fan operates at high speed;

When $T_{preset} - 2^{\circ}\text{C} < T_{amb} < T_{preset}$, the indoor fan operates at middle speed; When $T_{amb} \geq T_{preset}$, the indoor fan operates at low speed.

b. Auto fan speed in Cool and Fan mode

When $T_{amb} \geq T_{preset} + 2^{\circ}\text{C}$, the indoor fan operates at high speed;

When $T_{preset} < T_{amb} < T_{preset} + 2^{\circ}\text{C}$, the indoor fan operates at middle speed; When $T_{amb} \leq T_{preset}$, the indoor fan operates at low speed.


c. The auto fan speed is at low speed in Dry mode.

Note: Under auto fan speed, it will shift between high speed and middle speed, middle speed and low speed, high speed and low speed, the operation time must be 3.5min at least.


4. Sleep

4.1 The unit will select suitable sleep curve according to set temperature.

4.2 Sleep curve in Heat mode

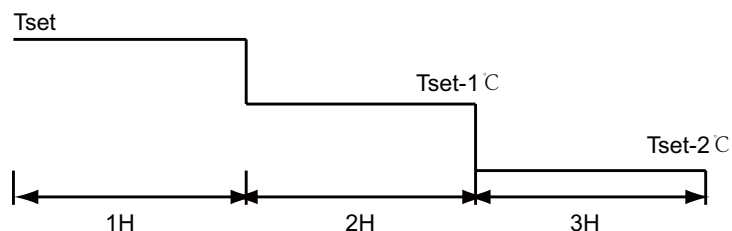

4.3 Sleep curve in Cool mode

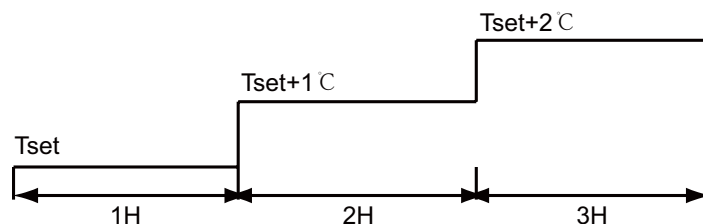

5. Timer Function

(1) General Timer:

1.1 Time On: If Timer On is set when the system is on, the controller will operate in the original setting mode after reaching the timer on time. The timer interval is 0.5h, and the setting range is 0.5-24h.

1.2 Timer Off: Timer Off can be set when the unit is on. The unit will be off when timer off time is reached. The timer interval is 0.5h, and the setting range is 0.5-24h.

(2) Clock Timer:

2.1 Timer On: If Timer On is set when the system runs, it will continue to run; if Timer On is set when the system is off, the system will start to run in the original setting mode when timer on time is reached.

2.2 Timer Off: If timer off is set when the system is off, the system keeps stand-by status; if timer off is set when the system is on, the system stops when reaching timer off time.

2.3 Timer Change: Timer On and Timer Off can be set via remote ON/OFF button. Timer time can be reset and the system will operate according to the latest setting.

When the unit is on and Timer On and Timer Off are both set, the system will operate according to the set state. When the timer off time is reached, the system will stop.

When the system stops, and Timer On and Timer Off are both set, the system will remain stop until timer on time is reached. After that, the unit will operate according to the set mode everyday when the timer on time is reached. When the timer off time is reached, the system will stop. If timer on time is the same as timer off time, the system will stop.

6. Memory Function

Memory contents: mode, up& down swing, light, set temperature, set fan speed, general timer (but clock timer). After power failure, if the unit is reenergized, it will operate according to memory contents. If Timer function is not set in the last remote control, the system will operate according to the last remote control.

If general timer function is set in the last remote control and power failure occurs before timer time is reached, the unit will operate

according to the timer function set in the last remote control. Timer time is calculated after the unit is re-energized.

If general timer function is set in the last remote control and power failure occurs after timer time is reached, the system will operate according to the memory content before power failure. Timer operation is not memorized.

7. Health Function

When the unit is on and the indoor fan operates, press Health button to start this function (if there is no Health button, health operation is defaulted). When indoor fan stops or turning of health function by remote controller, health function will be off.

8. I Feel Function

When the controller receives I Feel order, the controller will operate according to the ambient temperature. The remote controller will send ambient temperature to the controller every 10min. If the controller does not receive the ambient temperature sent by remote controller for 11min, the air conditioner will operate according the ambient temperature around it. If I Feel function is not set, the air conditioner will operate according the ambient temperature around it. This function is not memorized upon power r failure.

9. Reserved Fahrenheit Temperature

The nixie tube will display the set temperature in Celsius temperature or Fahrenheit Temperature according to the order. Setting range is 16~30℃ (61~86 ℉). In Auto mode, it will display 25℃ (77 ℉) during cooling and fan operation, and display 20℃ (68 ℉) during heating operation. For cooling only unit, it displays 25℃ (77 ℉).

The indoor temperature displayed is sent by remote controller, ranging from 0~60℃ (32~99 ℉). If outdoor ambient temperature is received, the display remains the same. If valid control signal is received, it will display set temperature for 5s and then resume displaying ambient temperature.

For units with memory function, set temperature will be displayed after re-energizing the unit.

10. Cold Plasma Function

Turning on the cold plasma function with remote controller when the fan operates, this function will act.

Turning off the cold plasma function with remote controller or turning off the fan, this function will end.

11. Turbo Function

When Turbo command is received by controller, indoor fan will operate at high speed while outdoor unit will operate at high frequency in cooling or heating mode.

12. Defrosting Mode Switch

If there is no H1 displayed, turn on the unit with remote controller and enter "Defrosting mode 1". When the indoor unit receives remote control signal, it will send the signal to the outdoor unit.

If there is H1 displayed, turn on the unit with remote controller and enter "Defrosting mode 2". When the indoor unit receives remote control signal, it will send the signal to the outdoor unit.

Press mode and auxiliary heating button to switch between "Defrosting mode 1" and "Defrosting mode 2".

13. Forcible Defrosting Function

When the unit is in Heat mode and set temperature is 16℃ , press "+, -, +, -, +, -, " successively for 5s, and the indoor unit will enter forcible defrosting setting and send the signal to the outdoor unit.

When the indoor unit receives forcible defrosting signal from the outdoor unit, it will exit forcible defrosting setting.

14. Refrigerant Recovery Function

Enter refrigerant recovery mode: turn on the unit within 5 min after energization and at 16℃ cooling mode. Press remote controller light off button successively for 3 times within 3s and the unit will enter refrigerant recovery mode, displaying Fo. The signal will be sent to the outdoor unit.

Exit refrigerant recovery mode: during refrigerant recovery, if any signal from remote controller is received or refrigerant recovery lasts for 25min, it will exit this mode.

Action of entering refrigerant recovery mode: the indoor fan will operate in Cool mode. The fan speed is high and set temperature is 16℃ . The horizontal louver will be at the smallest angle.

Action of exit refrigerant recovery mode: the indoor fan will operate according to the last remote control setting.

15. Pre-operation Function

When Cool mode at 30℃ is set, press "-", +, -, +, -, + successively for 3s, it will enter pre-operation mode. The signal will be sent to the outdoor unit.

Pre-operation mode: it performs cooling operation (indoor fan does not operate) and display "dd".

After exiting pre-operation mode, the indoor unit will stop displaying "dd". If the signal of "wrong wire connection or expansion valve malfunction" is received, "dn" will be displayed.

16. Mode Conflict

When the mode of started unit is different from that of operating unit, the indoor unit will display mode conflict code "E7". The mode sent to the outdoor unit remains the one received by the remote controller.

7. Installation Manual

7.1 Notices for Installation

Caution

- 1.The unit should be installed only by authorized service center according to local or government regulations and in compliance with this manual.
- 2.Before installing, please contact with local authorized maintenance center. If the unit is not installed by the authorized service center, the malfunction may not be solved due to inconvenient contact between the user and the service personnel.
- 3.When removing the unit to the other place, please firstly contact with the local authorized service center.
- 4.Warning: Before obtaining access to terminals, all supply circuits must be disconnected.
- 5.For appliances with type Y attachment, the instructions shall contain the substance of the following. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- 6.The temperature of refrigerant line will be high; please keep the interconnection cable away from the copper tube.
- 7.The instructions shall state the substance of the following:

This appliance is not intended for use by persons(including children)with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

Installation Site Instructions


Proper installation site is vital for correct and efficient operation of the unit. Avoid the following sites where:

- strong heat sources, vapours, flammable gas or volatile liquids are emitted.
- high-frequency electro-magnetic waves are generated by radio equipment,welders and medical equipment.
- salt-laden air prevails (such as close to coastal areas).
- the air is contaminated with industrial vapours and oils.
- the air contains sulphures gas such as in hot spring zones.
- corrosion or poor air quality exists.

Installation Site of Indoor Unit

1. The air inlet and outlet should be away from the obstructions. Ensure the air can be blown through the whole room.
2. Select a site where the condensate can be easily drained out, and where it is easily connected to outdoor unit.
3. Select a place where it is out of reach of children.
4. Select a place where the wall is strong enough to withstand the full weight and vibration of the unit.
5. Be sure to leave enough space to allow access for routine maintenance. The installation site should be 250cm or more above the floor.
6. Select a place about 1m or more away from TV set or any other electric appliance.
7. Select a place where the filter can be easily taken out.
8. Make sure that the indoor unit is installed in accordance with installation dimension instructions.
9. Do not use the unit in the laundry or by swimming pool etc.




7.2 Installation Drawing

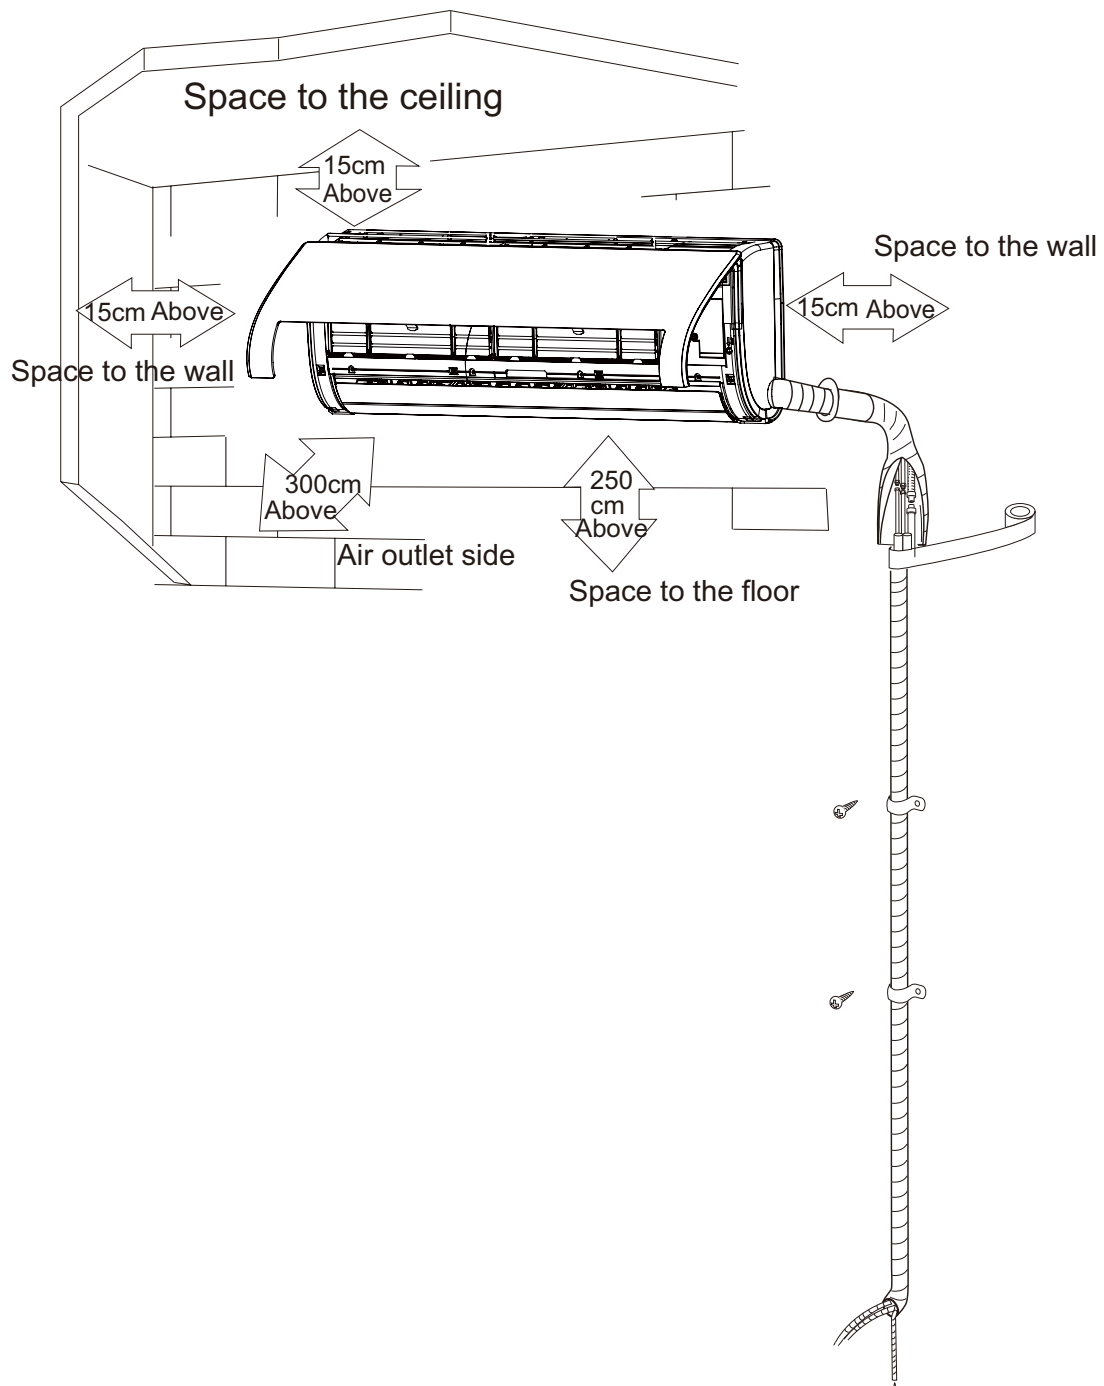

7.3 Install indoor unit


Install the rear panel

1. Mounting plate should be installed horizontally. As the water tray's outlet for the indoor unit is two-way type, during installation, the indoor unit should slightly slant to water tray's outlet for smooth drainage of condensate.
2. Fix the mounting plate on the wall with screws.
3. Be sure that the mounting plate has been fixed firmly enough to withstand about 60 kg. Meanwhile, the weight should be evenly shared by each screw.

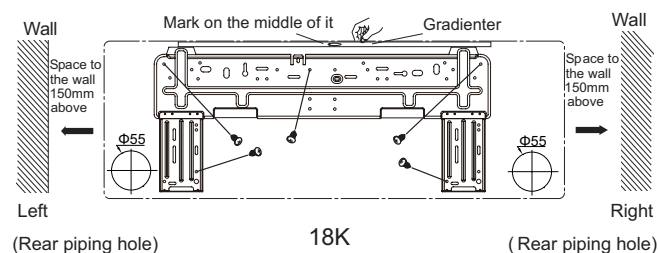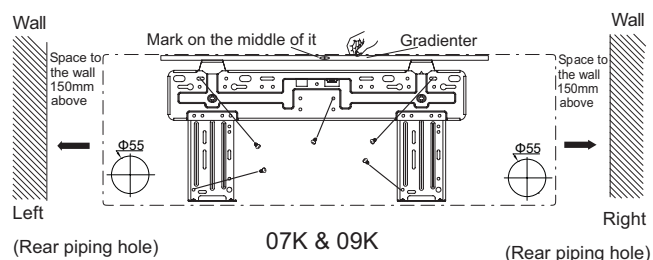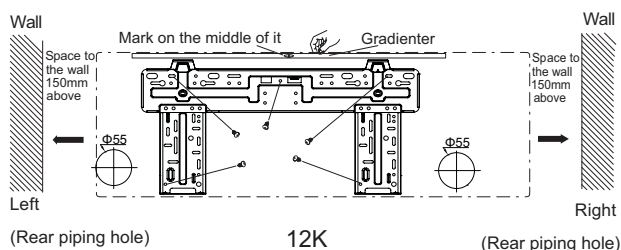

Install the piping hole

1. Slant the piping hole (Φ55) on the wall slightly downward to the outdoor side.
2. Insert the piping-hole sleeve into the hole to prevent the connection piping and wiring from being damaged when passing through the hole.

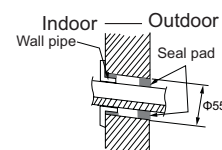


Install Drain Hose


1. Connect the drain hose to the outlet pipe of the indoor unit. Bind the joint with rubber belt.

2. Put the drain hose into insulating tube.

3. Wrap the insulating tube with wide rubber belt to prevent the shift of insulating tube. Slant the drain hose downward slightly for smooth drainage of condensate.

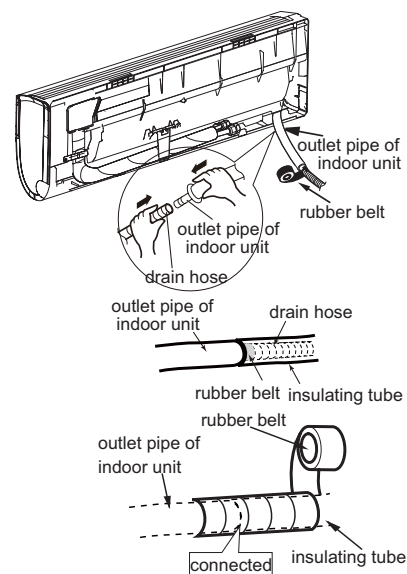

Note: The insulating tube should be connected reliably with the sleeve outside the outlet pipe. The drain hose should be slanted downward slightly, without distortion, bulge or fluctuation. Do not put the outlet in the water.

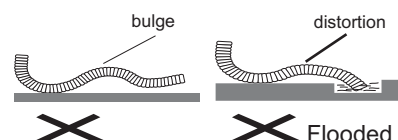

Connecting Indoor and Outdoor Electric Wires

1. Open the front panel.
2. Remove the wiring cover, connect and fix power connection cord to the terminal board as shown in Fig 1.
3. Make the power connection cord pass through the hole at the back of indoor unit.
4. Reinstall the cord anchorage and wiring cover.
5. Reinstall the front panel.

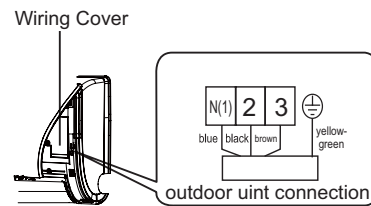


Fig 1

NOTE:

All wires between indoor and outdoor units must be connected by the qualified electric contractor.

- Electric wires must be connected correctly. Improper connection may cause malfunction.
- Tighten the terminal screws securely.
- After tightening the screws, pull the wire slightly to confirm whether it's firm or not.
- Make sure that the electric connections are earthed properly to prevent electric shock.
- Make sure that all wiring connections are secure and the cover plates are reinstalled properly. Poor installation may cause fire or electric shock.

Install the Indoor Unit

The piping can be output from right, right rear, left or left rear.

1. When routing the piping and wiring from the left or right side of indoor unit, cut off the tailings from the chassis when necessary (As shown in Fig.2)

(1) Cut off tailing 1 when routing the wiring only;

(2) Cut off tailing 1 and tailing 2 when routing both the wiring and piping.

2. Take out the piping from body case; wrap the piping, power cords, drain hose with the tape and then make them pass through the piping hole. (As shown in Fig.3)

3. Hang the mounting slots of the indoor unit on the upper hooks of the mounting plate and check if it is firm enough. (As shown in Fig.4)

4. The installation site should be 250cm or more above the floor.

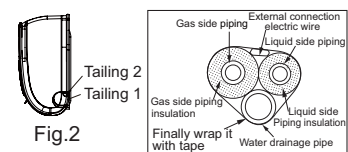


Fig.2

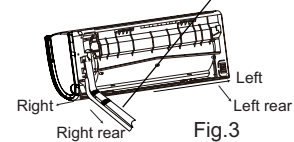


Fig.3


 


Fig.4

Install the connection pipe

1. Align the center of the pipe flare with the related valve.
2. Screw in the flare nut by hand and then tighten the nut with spanner and torque wrench by referring to the following:

| Hex nut diameter | Tightening torque(N·m) |
|------------------|------------------------|
| Φ6 | 15~20 |
| Φ 9.52 | 31~35 |
| Φ 12 | 50~55 |
| Φ 16 | 60~65 |
| Φ 19 | 70~75 |

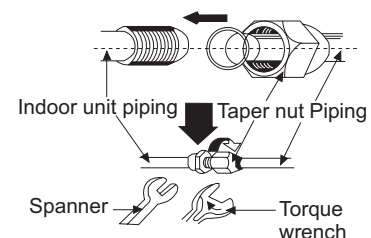

NOTE: Connect the connection pipe to indoor unit at first and then to outdoor unit. Handle piping bending with care. Do not damage the connection pipe. Ensure that the joint nut is tightened firmly, otherwise, it may cause leakage.

7.4 Check after Installation and Test Operation

Check after installation

| Items to be checked | Possible malfunction |
|--|---|
| Has it been fixed firmly? | The unit may drop, shake or emit noise. |
| Have you done the refrigerant leakage test? | It may cause insufficient cooling(heating) capacity. |
| Is heat insulation sufficient? | It may cause condensation and dripping. |
| Is water drainage well? | It may cause condensation and dripping. |
| Is the voltage in accordance with the rated voltage marked on the nameplate? | It may cause electric malfunction or damage the part. |
| Is the electric wiring and piping connection installed correctly and securely? | It may cause electric malfunction or damage the part. |
| Has the unit been connected to a secure earth connection? | It may cause electrical leakage. |
| Is the power cord specified? | It may cause electric malfunction or damage the part. |
| Is the inlet and outlet been covered? | It may cause insufficient cooling(heating) capacity. |
| Has the length of connection pipes and refrigerant capacity been recorded? | The refrigerant capacity is not accurate. |

Operation Test

1. Before Operation Test

- (1) Do not switch on power before installation is finished completely.
- (2) Electric wiring must be connected correctly and securely.
- (3) Cut-off valves of the connection pipes should be opened.
- (4) All the impurities such as scraps and thrums must be cleared from the unit.


2. Operation Test Method

- (1) Switch on power and press "ON/OFF" button on the remote controller to start operation.
- (2) Press MODE button to select the COOL, HEAT (Not available for cooling only unit), FAN to check whether the operation is normal or not.


7.5 Installation and Maintenance of Healthy Filter

Installation Instructions


1. Lift up the front panel from its two ends, as shown by the arrow direction, and then remove the air filter.(as shown in Fig.a)

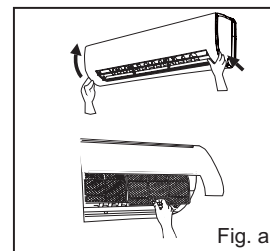

2. Attach the healthy filter onto the air filter,(as shown in Fig.b).

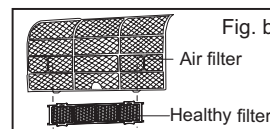

3. Install the air filter properly along the arrow direction in Fig.c, and then close the panel.

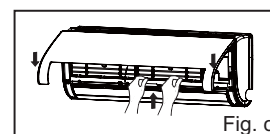

Cleaning and Maintenance

Remove the healthy filter and reinstall it after cleaning according to the installation instruction. Do not use brush or hard objects to clean the filter. After cleaning, be sure to dry it in the shade.

Service Life


The general service life for the healthy filter is about one year under normal condition. As for silver ion filter, it is ineffective when its surface becomes black (green).

This supplementary instruction is provided for reference to the unit with healthy filter. If the graphics provided herein are different from the actual product, please refer to the actual product. The quantity of healthy filters is based on the actual delivery.

8. Exploded Views and Parts List

GWH(07)UA-K3DNA1A/I


GWH(09)UA-K3DNA1A/I

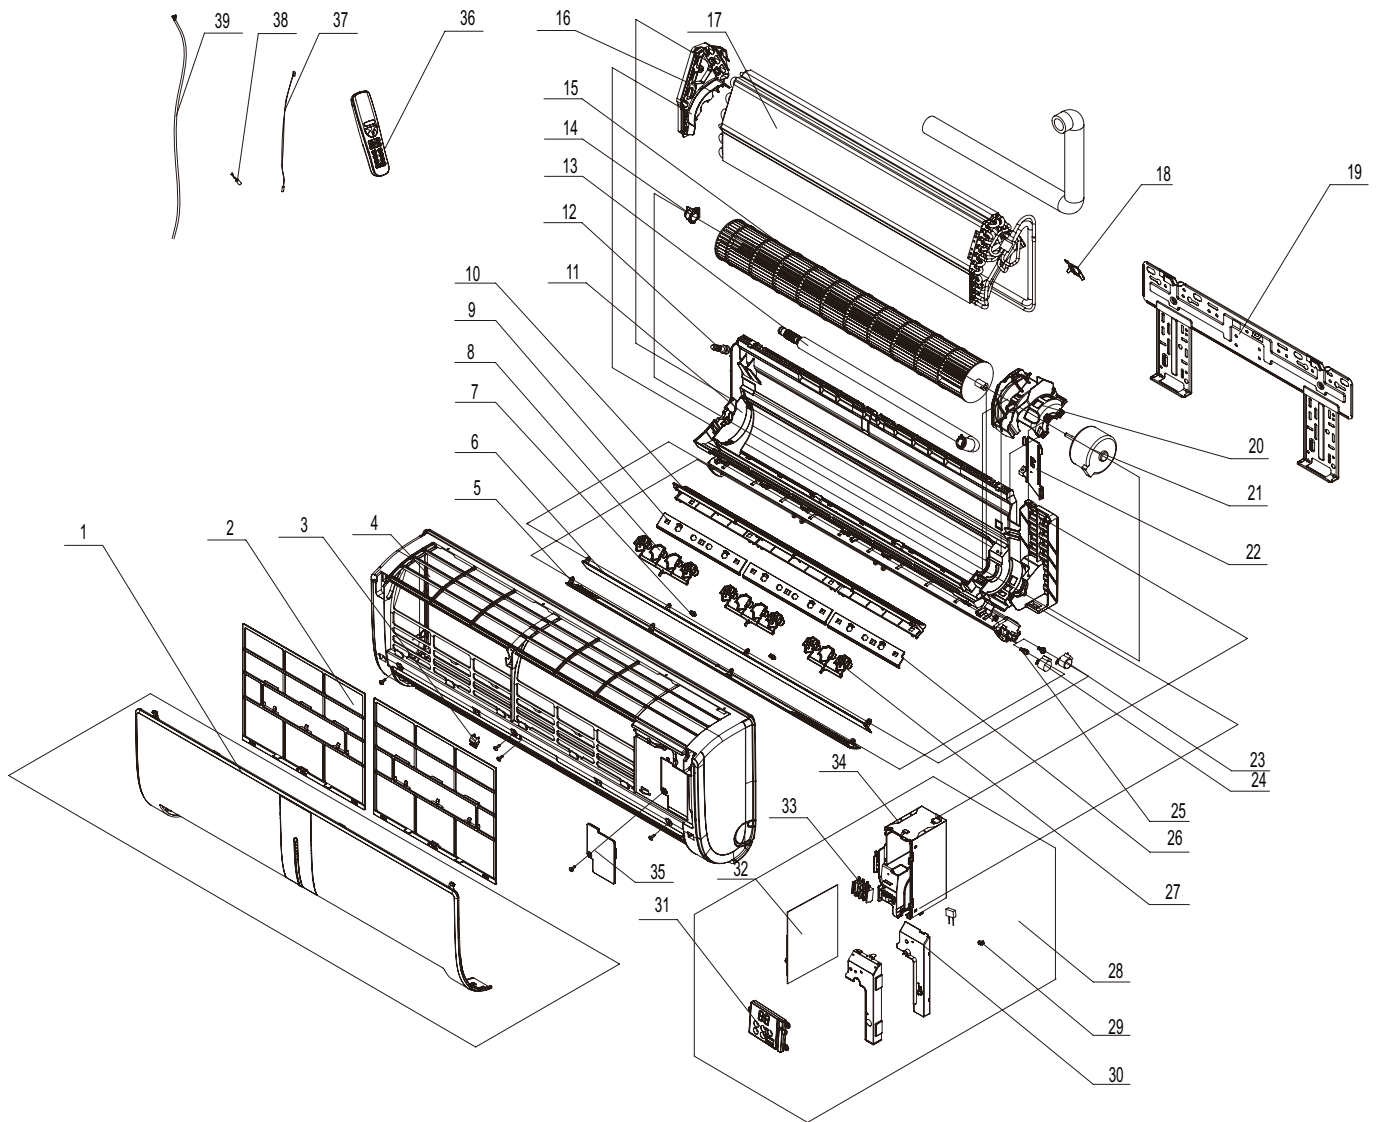

| NO. | Description | Part Code | | Qty |
|-----|----------------------------|---------------------|---------------------|-----|
| | | GWH(07)UA-K3DNA1A/I | GWH(09)UA-K3DNA1A/I | |
| | Product Code | CB204N01800 | CB204N01900 | |
| 1 | Front Panel Assy | 2001269506 | 2001269506 | 1 |
| 2 | Filter Sub-Assy | 11122122 | 11122122 | 2 |
| 3 | Screw Cover | 24252024 | 24252024 | 1 |
| 4 | Front Case Sub-assy | 2001269301 | 2001269301 | 1 |
| 5 | Guide Louver 1 | 10512218 | 10512218 | 1 |
| 6 | Guide Louver 2 | 10512219 | 10512219 | 1 |
| 7 | Shaft of Guide Louver | 1054202001 | 1054202001 | 6 |
| 8 | Air Louver 1 | 10512438 | 10512438 | 1 |
| 9 | Louver Clamp1 | 26112492 | 26112492 | 1 |
| 10 | Helicoid Tongue | 26112490 | 26112490 | 1 |
| 11 | Rear Case assy | 22202488 | 22202488 | 1 |
| 12 | Rubber Plug (Water Tray) | 76712012 | 76712012 | 1 |
| 13 | Drainage Hose | 0523001407 | 0523001407 | 1 |
| 14 | Axile Bush Sub-assy | 10542024 | 10542024 | 1 |
| 15 | Cross Flow Fan | 10352047 | 10352047 | 1 |
| 16 | Evaporator Support | 24212132 | 24212132 | 1 |
| 17 | Evaporator Assy | 0100263001 | 0100263001 | 1 |
| 18 | Shield Board (Elbow) | 01382010 | 01382010 | 1 |
| 19 | Wall Mounting Frame | 01252021 | 01252021 | 1 |
| 20 | Motor Press Plate | 26112270 | 26112270 | 1 |
| 21 | Fan Motor | 15012125 | 15012125 | 1 |
| 22 | Pipe Clamp | 26112164 | 26112164 | 1 |
| 23 | Step Motor | 1521212201 | 1521212201 | 1 |
| 24 | Step Motor | 1521210804 | 1521210804 | 1 |
| 25 | Crank | 73012005 | 73012005 | 2 |
| 26 | Louver Clamp2 | 26112491 | 26112491 | 1 |
| 27 | Air Louver 2 | 10512439 | 10512439 | 1 |
| 28 | Electric Box Assy | 20302654 | 20302654 | 1 |
| 29 | Jumper | 4202300102 | 4202300102 | 1 |
| 30 | Electric Box Cover | 2012213301 | 2012213301 | 1 |
| 31 | Display Board | 30565133 | 30565133 | 1 |
| 32 | Main Board | 301388701 | 301388701 | 1 |
| 33 | Terminal Board | 420111041 | 420111041 | 1 |
| 34 | Electric Box | 20112121 | 20112121 | 1 |
| 35 | Electric Box Cover2 | 20122168 | 20122168 | 1 |
| 36 | Remote Controller | 30510134 | 30510134 | 1 |
| 37 | Ambient Temperature Sensor | 390000453 | 390000453 | 1 |
| 38 | Temperature Sensor | 390000592 | 390000592 | 1 |
| 39 | Connecting Cable | 400204056 | 400204056 | 0 |

The data above are subject to change without notice.


GWH(12)UB-K3DNA1A/I

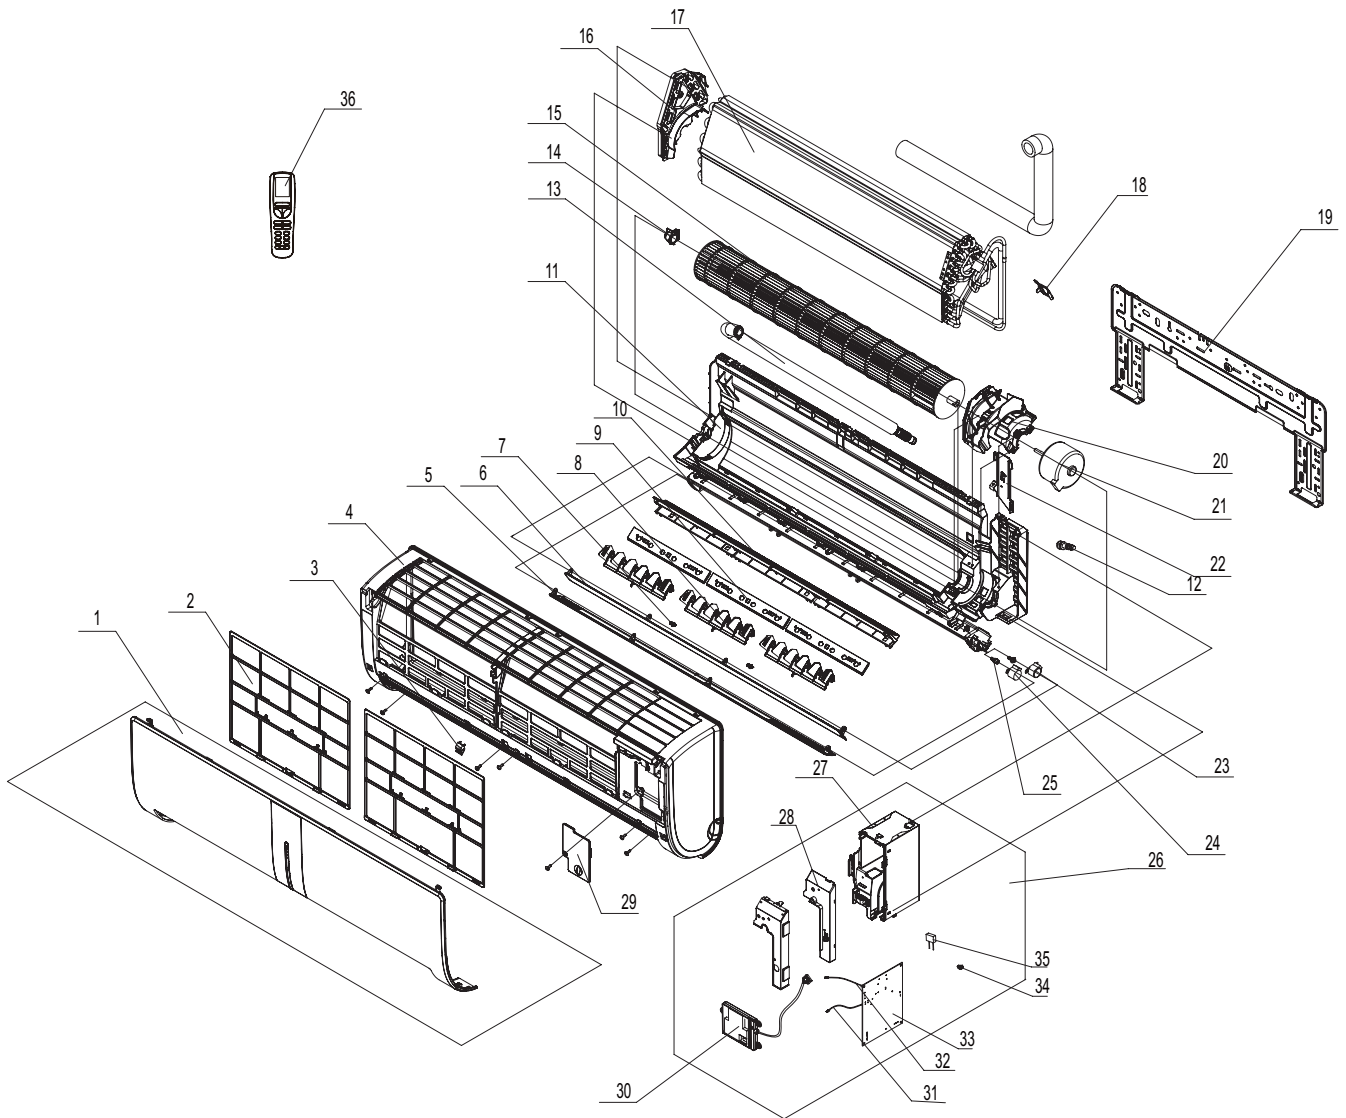

| NO. | Description | Part Code | Qty |
|-----|---|---------------------|-----|
| | | GWH(12)UB-K3DNA1A/I | |
| | Product Code | CB204N02000 | |
| 1 | Front Panel Assy | 2001285901 | 1 |
| 2 | Filter Sub-Assy | 11122134 | 2 |
| 3 | Screw Cover | 24252024 | 1 |
| 4 | Front Case Sub-assy | 2001272701 | 1 |
| 5 | Guide Louver 1 | 10512214 | 1 |
| 6 | Guide Louver 2 | 10512215 | 1 |
| 7 | Air Louver 1 | 10512184 | 2 |
| 8 | Air Louver 2 | 10512185 | 1 |
| 9 | Louver Clamp1 | 26112263 | 2 |
| 10 | Louver Clamp2 | 26112264 | 1 |
| 11 | Helicoid Tongue | 26112262 | 1 |
| 12 | Rear Case assy | 22202220 | 1 |
| 13 | Cross Flow Fan | 10352041 | 1 |
| 14 | Axile Bush Sub-assy | 10542024 | 1 |
| 15 | Evaporator Support | 24212128 | 1 |
| 16 | Evaporator Assy | 0100229401 | 1 |
| 17 | Shield Board (Elbow) | 01382010 | 1 |
| 18 | Wall Mounting Frame | 01252121 | 1 |
| 19 | Motor Press Plate | 26112261 | 1 |
| 20 | Fan Motor | 150120874 | 1 |
| 21 | Pipe Clamp | 26112164 | 1 |
| 22 | Rubber Plug (Water Tray) | 76712012 | 1 |
| 23 | Step Motor | 1521212201 | 1 |
| 24 | Step Motor | 1521210804 | 1 |
| 25 | Crank | 73012005 | 2 |
| 26 | Shaft of Guide Louver | 1054202001 | 6 |
| 27 | Drainage Hose | 05230014 | 1 |
| 28 | Electric Box | 20112121 | 1 |
| 29 | Magnetic Ring | 49010104 | 1 |
| 30 | Terminal Board | 420111041 | 1 |
| 31 | Wire Clamp | 71010003 | 1 |
| 32 | Main Board | 301388701 | 1 |
| 33 | Electric Box Cover2 | 2012207507 | 1 |
| 34 | Capacitor CBB61 | 33010002 | 1 |
| 35 | Jumper | 4202300104 | 1 |
| 36 | Upper Shield Cover Sub-assy of Electric Box | 01592301 | 1 |
| 37 | Electric Box Cover | 20122133 | 1 |
| 38 | Lower Shield Sub-assy of Electric Box | 01592300 | 1 |
| 39 | Electric Box Assy | 20302655 | 1 |
| 40 | Pipe Connection Nut Accessories | 06320020 | 1 |
| 41 | Ambient Temperature Sensor | 390000453 | 1 |
| 42 | Connecting Cable | 400204056 | 0 |
| 43 | Temperature Sensor | 390000592 | 1 |
| 44 | Display Board | 30565133 | 1 |
| 45 | Remote Controller | 30510134 | 1 |

The data above are subject to change without notice.

GWH(18)UC-K3DNA1A/I

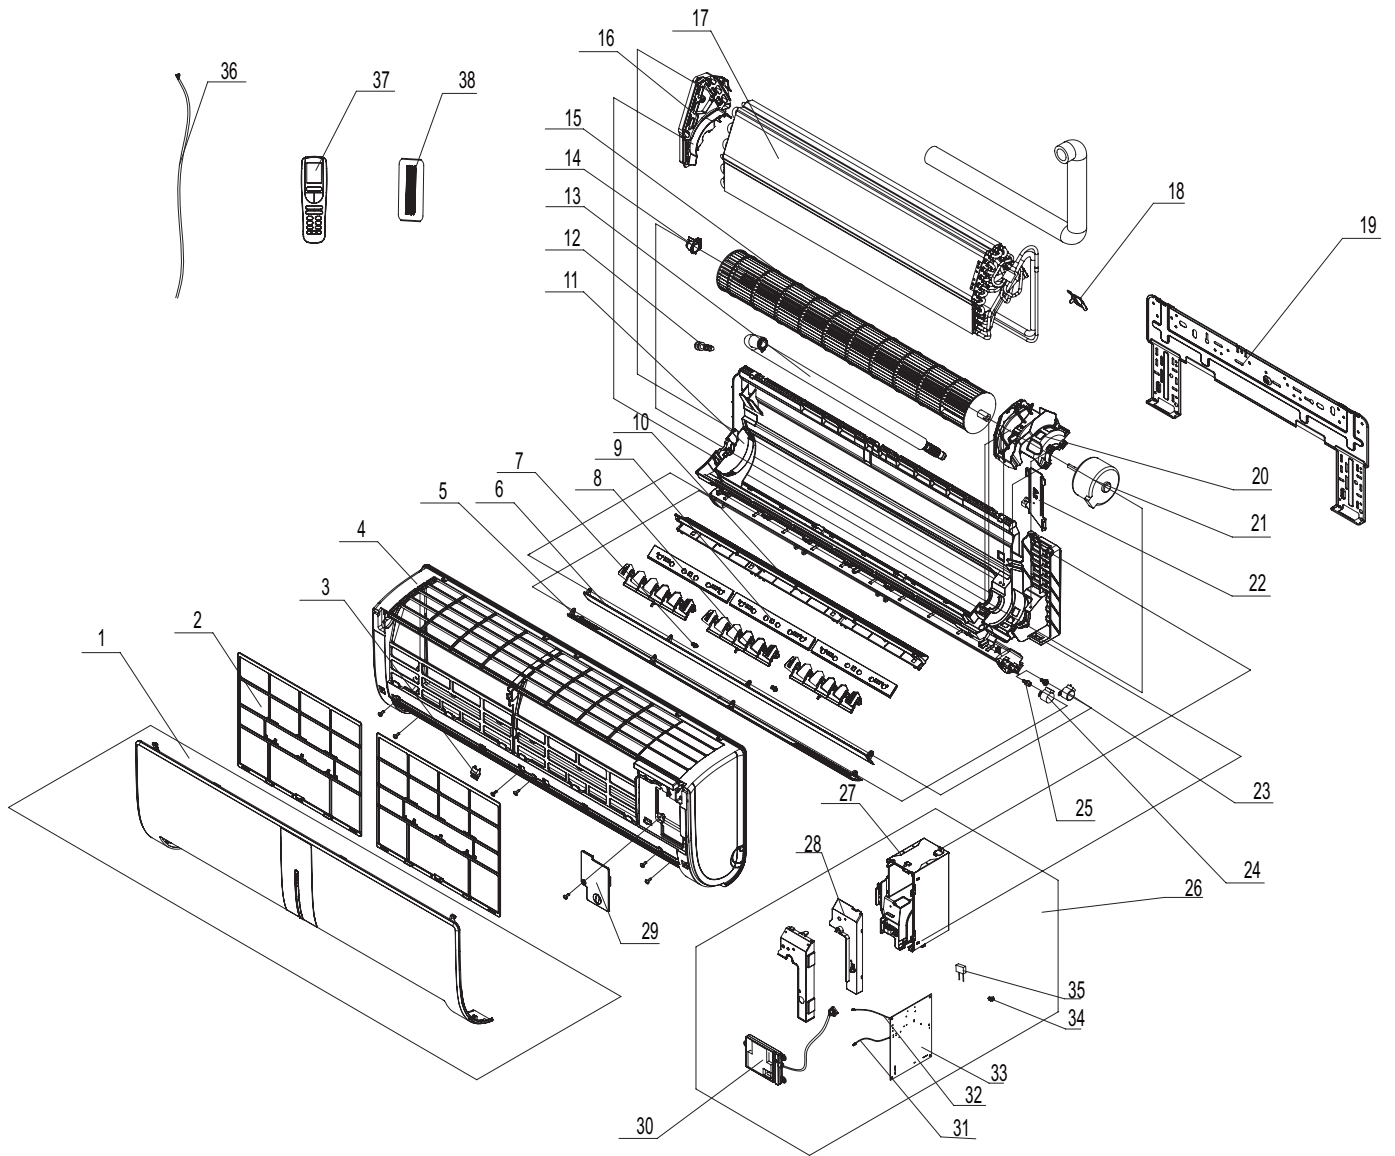


| NO. | Description | Part Code | Qty |
|-----|----------------------------|---------------------|-----|
| | | GWH(18)UC-K3DNA1A/I | |
| | Product Code | CB204N02100 | |
| 1 | Front Panel Assy | 2001280401 | 1 |
| 2 | Filter Sub-Assy | 11122133 | 2 |
| 3 | Screw Cover | 24252024 | 3 |
| 4 | Front Case Sub-assy | 2001280503 | 1 |
| 5 | Guide Louver 1 | 10512222 | 1 |
| 6 | Guide Louver 2 | 10512223 | 1 |
| 7 | Shaft of Guide Louver | 1054202001 | 6 |
| 8 | Air Louver(Manual) | 10512221 | 1 |
| 9 | Louver Clamp | 26112493 | 1 |
| 10 | Helicoid Tongue | 26112495 | 1 |
| 11 | Rear Case assy | 22202284 | 1 |
| 12 | Drainage Hose | 0523001406 | 1 |
| 13 | Axile Bush Sub-assy | 10542024 | 1 |
| 14 | Cross Flow Fan | 10352030 | 1 |
| 15 | Evaporator Support | 24212135 | 1 |
| 16 | Evaporator Assy | 01002327 | 1 |
| 17 | Shield Board (Elbow) | 01382010 | 1 |
| 18 | Wall Mounting Frame | 01252032 | 1 |
| 19 | Motor Press Plate | 26112295 | 1 |
| 20 | Fan Motor | 1501209802 | 1 |
| 21 | Pipe Clamp | 26112164 | 1 |
| 22 | Rubber Plug (Water Tray) | 76712012 | 1 |
| 23 | Step Motor | 15212125 | 1 |
| 24 | Step Motor | 15212126 | 1 |
| 25 | Crank | 73012005 | 2 |
| 26 | Electric Box Assy | 20302656 | 1 |
| 27 | Electric Box | 20112134 | 1 |
| 28 | Electric Box Cover | 20122158 | 1 |
| 29 | Electric Box Cover2 | 20122159 | 1 |
| 30 | Display Board | 30565134 | 1 |
| 31 | Ambient Temperature Sensor | 390000453 | 1 |
| 32 | Temperature Sensor | 390000592 | 1 |
| 33 | Main Board | 30138901 | 1 |
| 34 | Jumper | 4202300111 | 1 |
| 35 | Capacitor CBB61 | 33010034 | 1 |
| 36 | Connecting Cable | 400204056 | 0 |
| 37 | Remote Controller | 30510134 | 1 |
| 38 | Filter | 11122135 | 1 |

The data above are subject to change without notice.

GWH(07)UA-K3DNA1A/I(Cold Plasma)


GWH(09)UA-K3DNA1A/I(Cold Plasma)

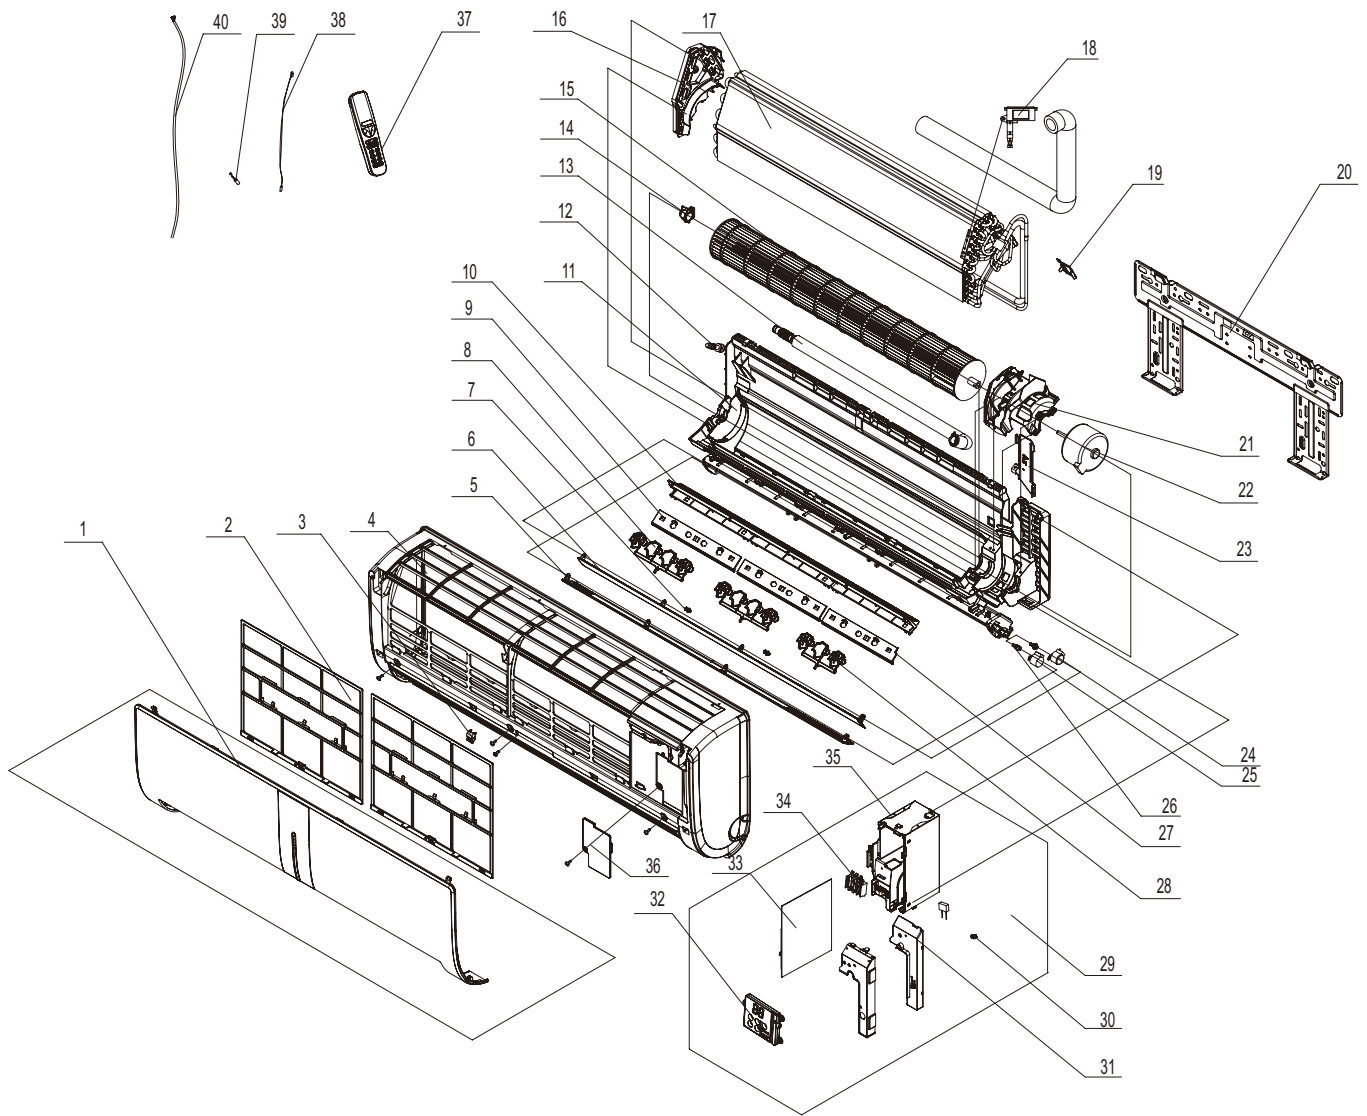

| NO. | Description | Part Code | | Qty |
|-----|----------------------------|--------------------------------------|--------------------------------------|-----|
| | | GWH(07)UA-K3DNA1A/I (Cold Plasma) | GWH(09)UA-K3DNA1A/I (Cold Plasma) | |
| | Product Code | CB204N01801 | CB204N01901 | |
| 1 | Front Panel Assy | 2001269506 | 2001269506 | 1 |
| 2 | Filter Sub-Assy | 11122122 | 11122122 | 2 |
| 3 | Screw Cover | 24252024 | 24252024 | 1 |
| 4 | Front Case Sub-assy | 2001269301 | 2001269301 | 1 |
| 5 | Guide Louver 1 | 10512218 | 10512218 | 1 |
| 6 | Guide Louver 2 | 10512219 | 10512219 | 1 |
| 7 | Shaft of Guide Louver | 1054202001 | 1054202001 | 6 |
| 8 | Air Louver 1 | 10512438 | 10512438 | 1 |
| 9 | Louver Clamp1 | 26112492 | 26112492 | 1 |
| 10 | Helicoid Tongue | 26112490 | 26112490 | 1 |
| 11 | Rear Case assy | 22202488 | 22202488 | 1 |
| 12 | Rubber Plug (Water Tray) | 76712012 | 76712012 | 1 |
| 13 | Drainage Hose | 0523001407 | 0523001407 | 1 |
| 14 | Axile Bush Sub-assy | 10542024 | 10542024 | 1 |
| 15 | Cross Flow Fan | 10352047 | 10352047 | 1 |
| 16 | Evaporator Support | 24212132 | 24212132 | 1 |
| 17 | Evaporator Assy | 0100263001 | 0100263001 | 1 |
| 18 | Cold Plasma Generator | 1114001603 | 1114001603 | 1 |
| 19 | Shield Board (Elbow) | 01382010 | 01382010 | 1 |
| 20 | Wall Mounting Frame | 01252021 | 01252021 | 1 |
| 21 | Motor Press Plate | 26112270 | 26112270 | 1 |
| 22 | Fan Motor | 15012125 | 15012125 | 1 |
| 23 | Pipe Clamp | 26112164 | 26112164 | 1 |
| 24 | Step Motor | 1521212201 | 1521212201 | 1 |
| 25 | Step Motor | 1521210804 | 1521210804 | 1 |
| 26 | Crank | 73012005 | 73012005 | 2 |
| 27 | Louver Clamp2 | 26112491 | 26112491 | 1 |
| 28 | Air Louver 2 | 10512439 | 10512439 | 1 |
| 29 | Electric Box Assy | 20302654 | 20302654 | 1 |
| 30 | Jumper | 4202300102 | 4202300102 | 1 |
| 31 | Electric Box Cover | 2012213301 | 2012213301 | 1 |
| 32 | Display Board | 30565133 | 30565133 | 1 |
| 33 | Main Board | 301388701 | 301388701 | 1 |
| 34 | Terminal Board | 420111041 | 420111041 | 1 |
| 35 | Electric Box | 20112121 | 20112121 | 1 |
| 36 | Electric Box Cover2 | 20122168 | 20122168 | 1 |
| 37 | Remote Controller | 30510134 | 30510134 | 1 |
| 38 | Ambient Temperature Sensor | 390000453 | 390000453 | 1 |
| 39 | Temperature Sensor | 390000592 | 390000592 | 1 |
| 40 | Connecting Cable | 400204056 | 400204056 | 0 |

The data above are subject to change without notice.


GWH(12)UB-K3DNA1A/I(Cold Plasma)

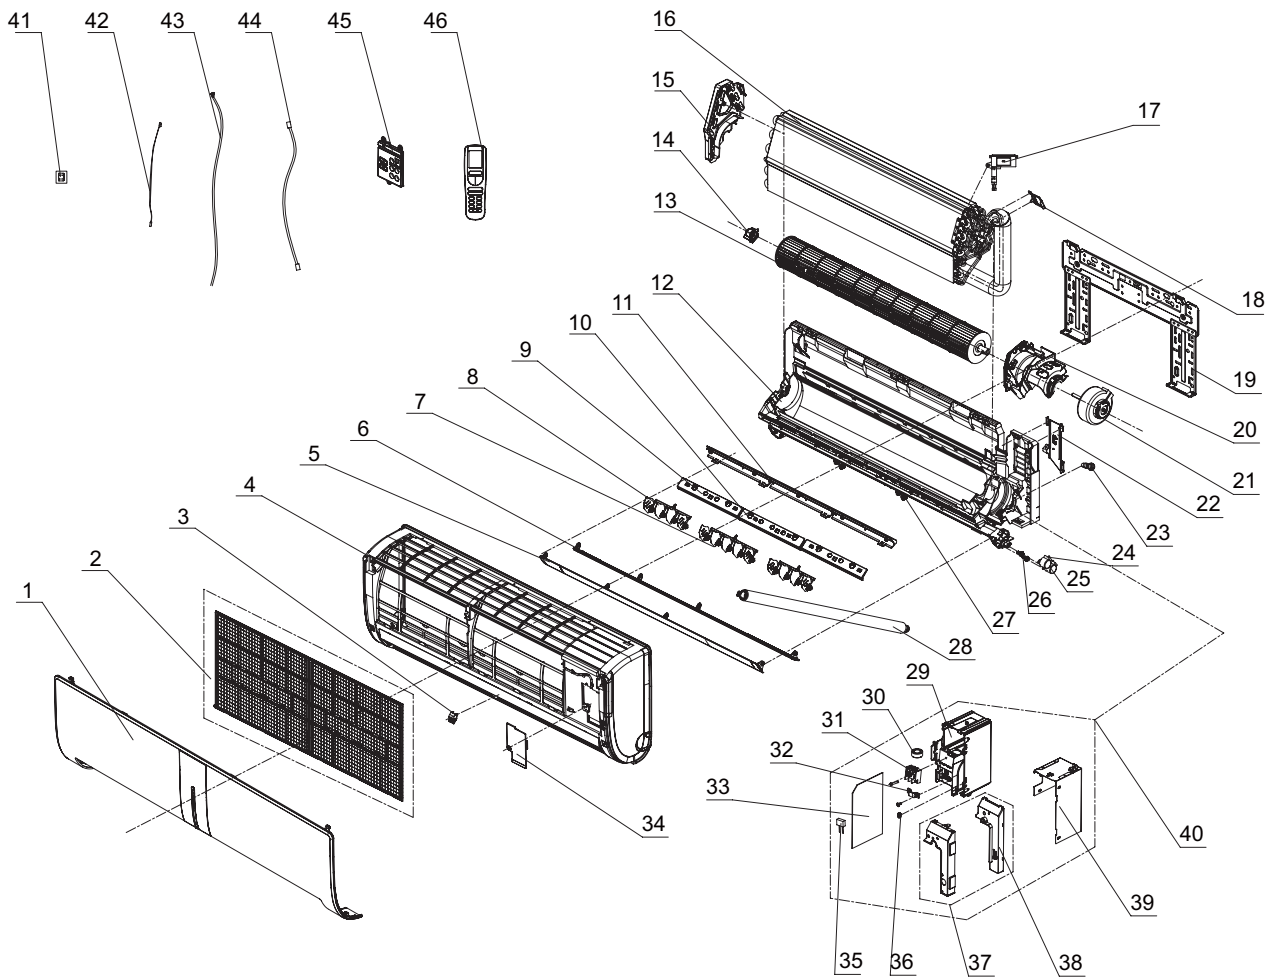

| NO. | Description | Part Code | Qty |
|-----|---|----------------------------------|-----|
| | | GWH(12)UB-K3DNA1A/I(Cold Plasma) | |
| | Product Code | CB204N02001 | |
| 1 | Front Panel Assy | 2001285901 | 1 |
| 2 | Filter Sub-Assy | 11122134 | 2 |
| 3 | Screw Cover | 24252024 | 1 |
| 4 | Front Case Sub-assy | 2001272701 | 1 |
| 5 | Guide Louver 1 | 10512214 | 1 |
| 6 | Guide Louver 2 | 10512215 | 1 |
| 7 | Air Louver 1 | 10512184 | 2 |
| 8 | Air Louver 2 | 10512185 | 1 |
| 9 | Louver Clamp1 | 26112263 | 2 |
| 10 | Louver Clamp2 | 26112264 | 1 |
| 11 | Helicoid Tongue | 26112262 | 1 |
| 12 | Rear Case assy | 22202220 | 1 |
| 13 | Cross Flow Fan | 10352041 | 1 |
| 14 | Axile Bush Sub-assy | 10542024 | 1 |
| 15 | Evaporator Support | 24212128 | 1 |
| 16 | Evaporator Assy | 0100229401 | 1 |
| 17 | Cold Plasma Generator | 1114001603 | 1 |
| 18 | Shield Board (Elbow) | 01382010 | 1 |
| 19 | Wall Mounting Frame | 01252121 | 1 |
| 20 | Motor Press Plate | 26112261 | 1 |
| 21 | Fan Motor | 150120874 | 1 |
| 22 | Pipe Clamp | 26112164 | 1 |
| 23 | Rubber Plug (Water Tray) | 76712012 | 1 |
| 24 | Step Motor | 1521212201 | 1 |
| 25 | Step Motor | 1521210804 | 1 |
| 26 | Crank | 73012005 | 2 |
| 27 | Shaft of Guide Louver | 1054202001 | 6 |
| 28 | Drainage Hose | 05230014 | 1 |
| 29 | Electric Box | 20112121 | 1 |
| 30 | Magnetic Ring | 49010104 | 1 |
| 31 | Terminal Board | 420111041 | 1 |
| 32 | Wire Clamp | 71010003 | 1 |
| 33 | Main Board | 301388701 | 1 |
| 34 | Electric Box Cover2 | 2012207507 | 1 |
| 35 | Capacitor CBB61 | 33010002 | 1 |
| 36 | Jumper | 4202300104 | 1 |
| 37 | Upper Shield Cover Sub-assy of Electric Box | 01592301 | 1 |
| 38 | Electric Box Cover | 20122133 | 1 |
| 39 | Lower Shield Sub-assy of Electric Box | 01592300 | 1 |
| 40 | Electric Box Assy | 20302655 | 1 |
| 41 | Pipe Connection Nut Accessories | 06320020 | 1 |
| 42 | Ambient Temperature Sensor | 390000453 | 1 |
| 43 | Connecting Cable | 400204056 | 0 |
| 44 | Temperature Sensor | 390000592 | 1 |
| 45 | Display Board | 30565133 | 1 |
| 46 | Remote Controller | 30510134 | 1 |

The data above are subject to change without notice.

GWH(18)UC-K3DNA1A/I(Cold Plasma)

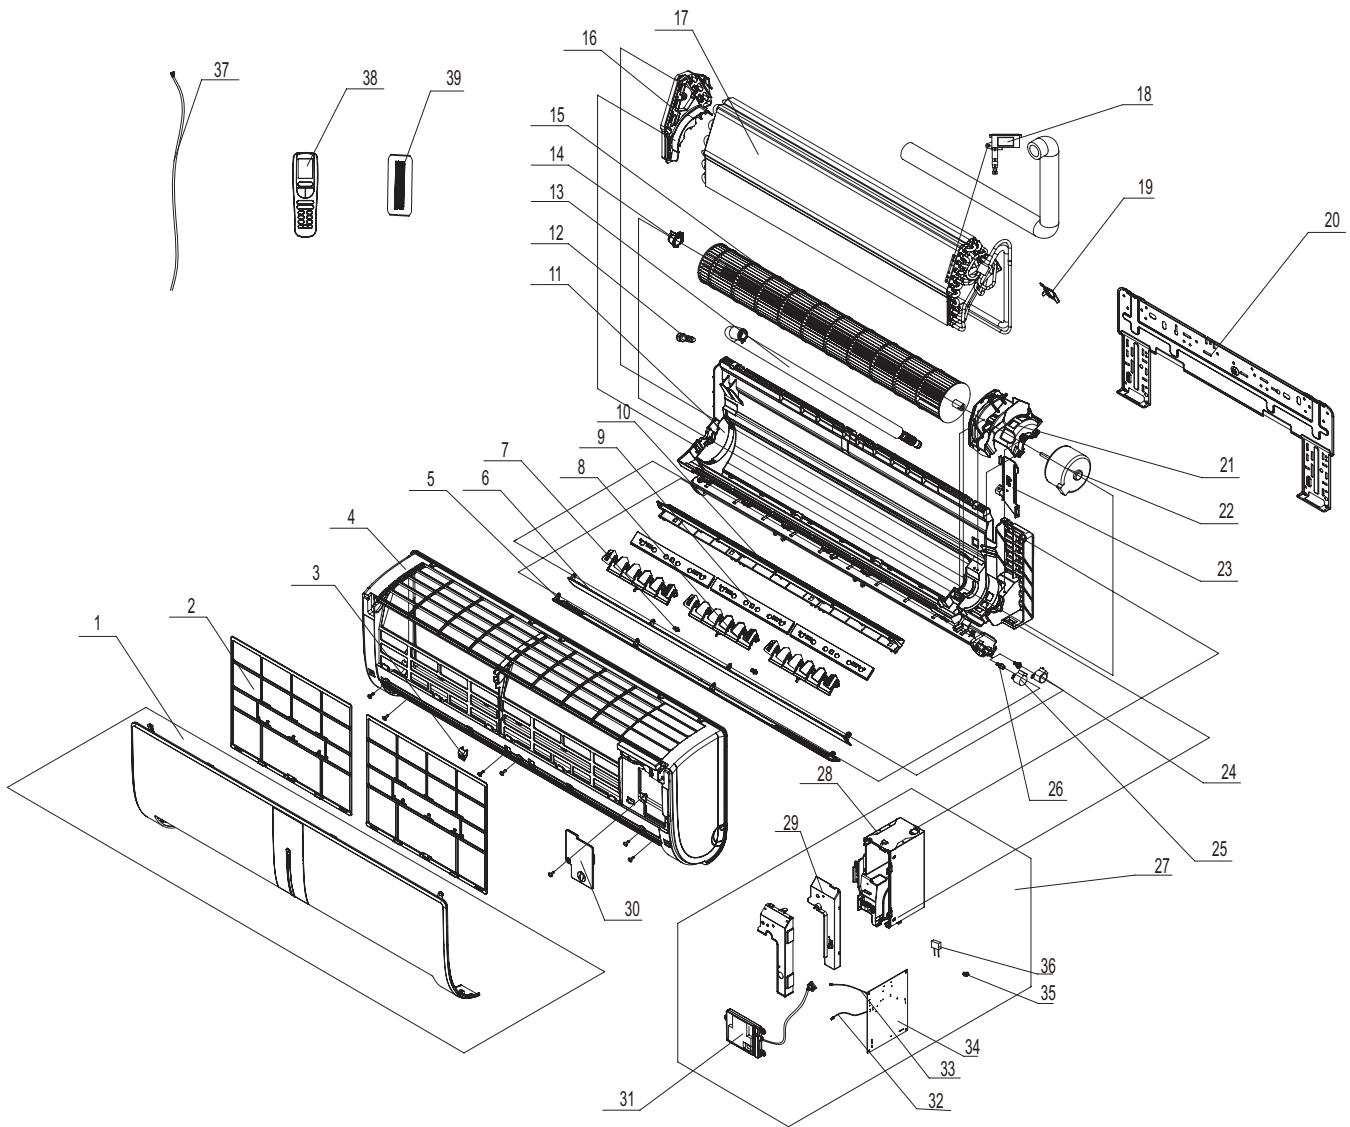

| NO. | Description | Part Code | Qty |
|-----|----------------------------|----------------------------------|-----|
| | | GWH(18)UC-K3DNA1A/I(Cold Plasma) | |
| | Product Code | CB204N02100 | |
| 1 | Front Panel Assy | 2001280401 | 1 |
| 2 | Filter Sub-Assy | 11122133 | 2 |
| 3 | Screw Cover | 24252024 | 3 |
| 4 | Front Case Sub-assy | 2001280503 | 1 |
| 5 | Guide Louver 1 | 10512222 | 1 |
| 6 | Guide Louver 2 | 10512223 | 1 |
| 7 | Shaft of Guide Louver | 1054202001 | 6 |
| 8 | Air Louver(Manual) | 10512221 | 1 |
| 9 | Louver Clamp | 26112493 | 1 |
| 10 | Helicoid Tongue | 26112495 | 1 |
| 11 | Rear Case assy | 22202284 | 1 |
| 12 | Drainage Hose | 0523001406 | 1 |
| 13 | Axile Bush Sub-assy | 10542024 | 1 |
| 14 | Cross Flow Fan | 10352030 | 1 |
| 15 | Evaporator Support | 24212135 | 1 |
| 16 | Evaporator Assy | 01002327 | 1 |
| 17 | Cold Plasma Generator | 1114001603 | 1 |
| 18 | Shield Board (Elbow) | 01382010 | 1 |
| 19 | Wall Mounting Frame | 01252032 | 1 |
| 20 | Motor Press Plate | 26112295 | 1 |
| 21 | Fan Motor | 1501209802 | 1 |
| 22 | Pipe Clamp | 26112164 | 1 |
| 23 | Rubber Plug (Water Tray) | 76712012 | 1 |
| 24 | Step Motor | 15212125 | 1 |
| 25 | Step Motor | 15212126 | 1 |
| 26 | Crank | 73012005 | 2 |
| 27 | Electric Box Assy | 20302656 | 1 |
| 28 | Electric Box | 20112134 | 1 |
| 29 | Electric Box Cover | 20122158 | 1 |
| 30 | Electric Box Cover2 | 20122159 | 1 |
| 31 | Display Board | 30565134 | 1 |
| 32 | Ambient Temperature Sensor | 390000453 | 1 |
| 33 | Temperature Sensor | 390000592 | 1 |
| 34 | Main Board | 30138901 | 1 |
| 35 | Jumper | 4202300111 | 1 |
| 36 | Capacitor CBB61 | 33010034 | 1 |
| 37 | Connecting Cable | 400204056 | 0 |
| 38 | Remote Controller | 30510134 | 1 |
| 39 | Filter | 11122135 | 1 |

The data above are subject to change without notice.

9. Troubleshooting

9.1 Malfunction Display of Indoor Unit

1. Malfunction display requirement

When there are several malfunctions, they will be displayed circularly.

2. Malfunction display method

(1) Hardware malfunction: immediate display; refer to “malfunction display table”;

(2) Operation state: immediate display; refer to “malfunction display table”;

(3) Other malfunctions: it is displayed after the compressor stops for 200s; refer to “malfunction display table”.

Note: when the compressor is restarted, the malfunction display delay time (200s) is cleared.

(4) When the unit is under limit frequency or frequency drop state, the display can be controlled via remote controller.

3. Malfunction display control

The indicator lamp and dual 8 nixie tube displays shall be synchronized. That is when the indicator lamp blinks, the dual 8 nixie tube displays the corresponding malfunction code.

4. Display control via remote controller

Enter display control: press light button successively for 4 times within 3s to display the corresponding malfunction code;

Exit display control: pressing light button successively for 4 times within 3s or after display is shown for 5min, the display will terminate.

| Malfunction Name | Dual-8 Nixie Tube | Indicator Display | | |
|---|-------------------|---------------------|-------------------|-------------------|
| | | Operation indicator | Cooling indicator | Heating indicator |
| Malfunction of jumper cap | C5 | blink 15 times | | |
| No feedback from indoor unit's motor | H6 | blink 11 times | | |
| Circuit malfunction of zero crossing detection | U8 | blink 17 times | | |
| Indoor ambient temperature sensor is open/short-circuited | F1 | | blink once | |
| Indoor evaporator temperature sensor is open/short-circuited | F2 | | blink twice | |
| Liquid valve temperature sensor is open/short-circuited | b5 | | blink 19 times | |
| Gas valve temperature sensor is open/short-circuited | b7 | | blink 22 times | |
| module temperature sensor is open/short-circuited | P7 | | | blink 18 times |
| Outdoor ambient temperature sensor is open/short-circuited | F3 | | blink 3 times | |
| Outdoor condenser tube temperature sensor is open/short-circuited | F4 | | blink 4 times | |
| Outdoor discharge temperature sensor is open/short-circuited | F5 | | blink 5 times | |
| Communication malfunction between indoor and outdoor units | E6 | blink 6 times | | |
| Malfunction of phase current circuit detection for compressor | U1 | | | blink 12 times |
| Module temperature protection | P8 | | | blink 19 times |
| Charging malfunction of capacitor | PU | | | blink 17 times |
| High pressure protection of system | E1 | blink once | | |
| Overload protection of compressor | H3 | | | blink 3 times |
| Wrong connection for communication wire or malfunction of expansion valve (free match) | dn | / | / | / |
| Wrong connection for communication wire or malfunction detection status of expansion valve (free match) | dd | / | / | / |
| Mode shock | E7 | blink 7 times | | |
| Freon recovery mode | Fo | blink once | blink once | |
| Defrosting and oil return under heating | H1 | | | blink once |
| Failure start-up of compressor | Lc | | | blink 11 times |
| Discharge high-temperature protection of compressor | E4 | blink 4 times | | |
| Overload protection | E8 | blink 8 times | | |
| Overcurrent protection of the complete unit | E5 | blink 5 times | | |
| Overcurrent protection of phase current | P5 | | | blink 15 times |

| | | | | |
|---|----|---------------|----------------|----------------|
| Desynchronizing of compressor | H7 | | | blink 7 times |
| Loss phase/inverse phase protection for compressor | Ld | / | / | / |
| Module current protection (IPM protection) | H5 | | | blink 5 times |
| Low voltage protection of DC bus bar | PL | | | blink 21 times |
| High voltage protection of DC bus bar | PH | | blink 11 times | |
| PFC protection | HC | | | blink 6 times |
| Limit/decrease frequency due to current protection of the complete unit | F8 | | blink 8 times | |
| Limit/decrease frequency due to module current protection (phase current) | En | / | / | / |
| Limit/decrease frequency due to discharge | F9 | | blink 9 times | |
| Limit/decrease frequency due to freeze protection | FH | | blink twice | blink twice |
| Limit/decrease frequency due to overload | F6 | | blink 6 times | |
| Limit/decrease frequency due to module temperature protection | EU | | blink 6 times | blink 6 times |
| Oil return under cooling | F7 | | blink 7 times | |
| Cold air prevention protection | E9 | blink 9 times | | |
| Freeze protection | E2 | blink twice | | |

Display under test state


Dual 8 nixie tube display: minimum cooling (heating)-P0; middle cooling (heating)-P3

Nominal cooling (heating) –P1; maximum cooling (heating) –P2;

Corresponding indicator lamp will be on for 0.3s and off for 0.3s

9.2 How to Check Simply The Main Part

9.2.1 F1/F2 Malfunction

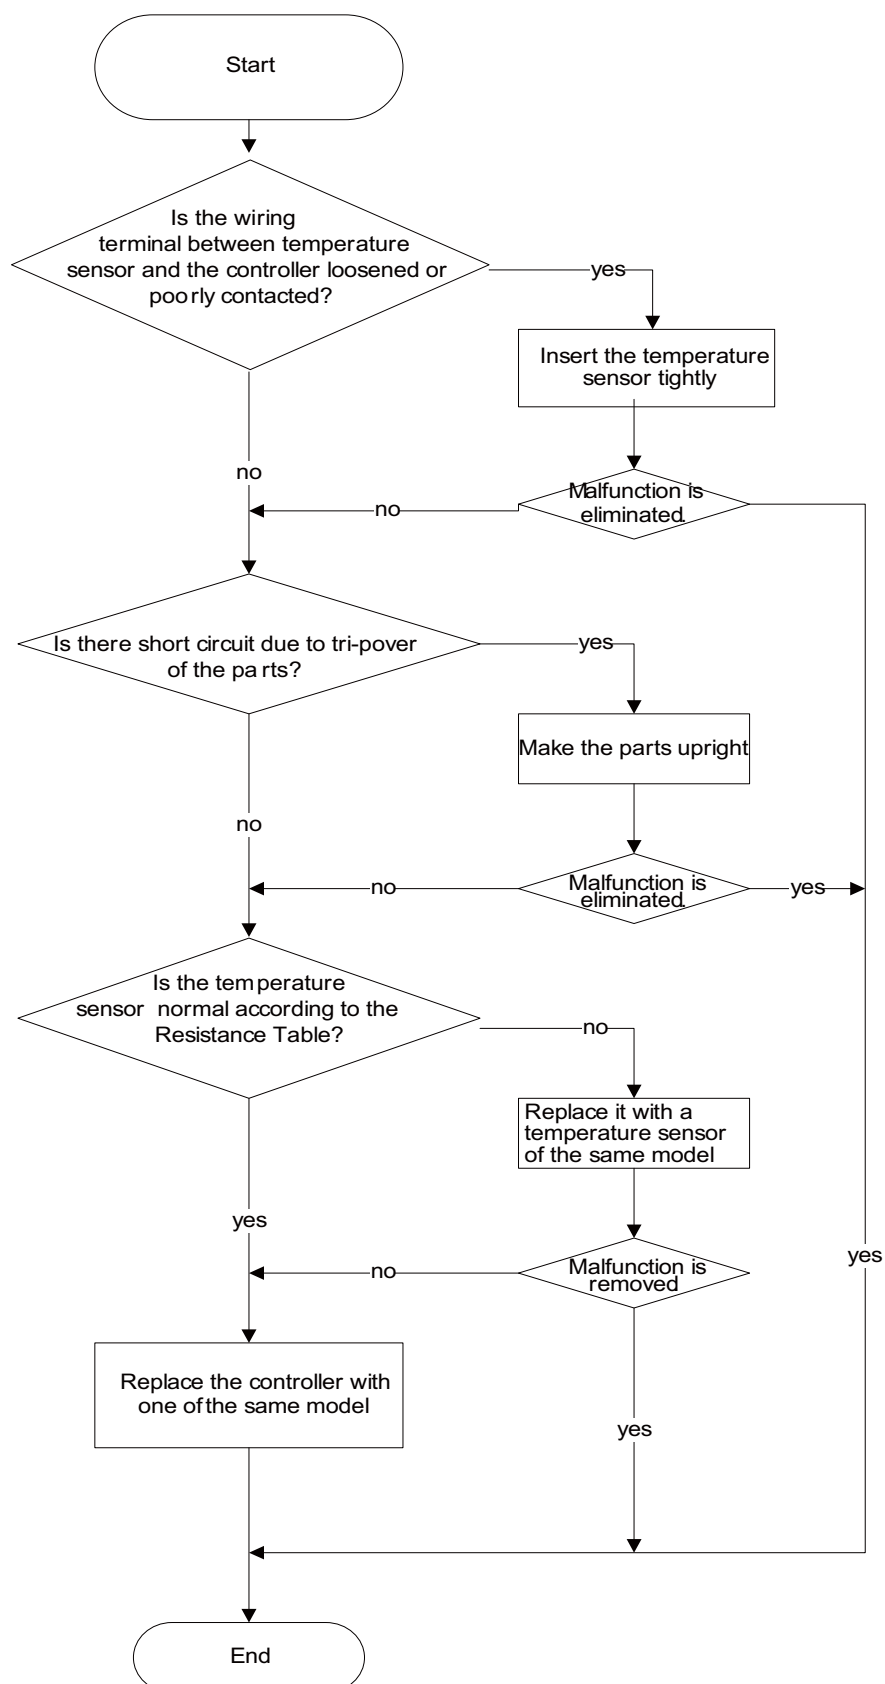


9.2.2 C5 Malfunction

Possible causes:

1. There is no jumper cap on the controller;
2. Jumper cap is not inserted properly and tightly;
3. Jumper cap is damaged;
4. Controller is damaged.

See the flow chart below:

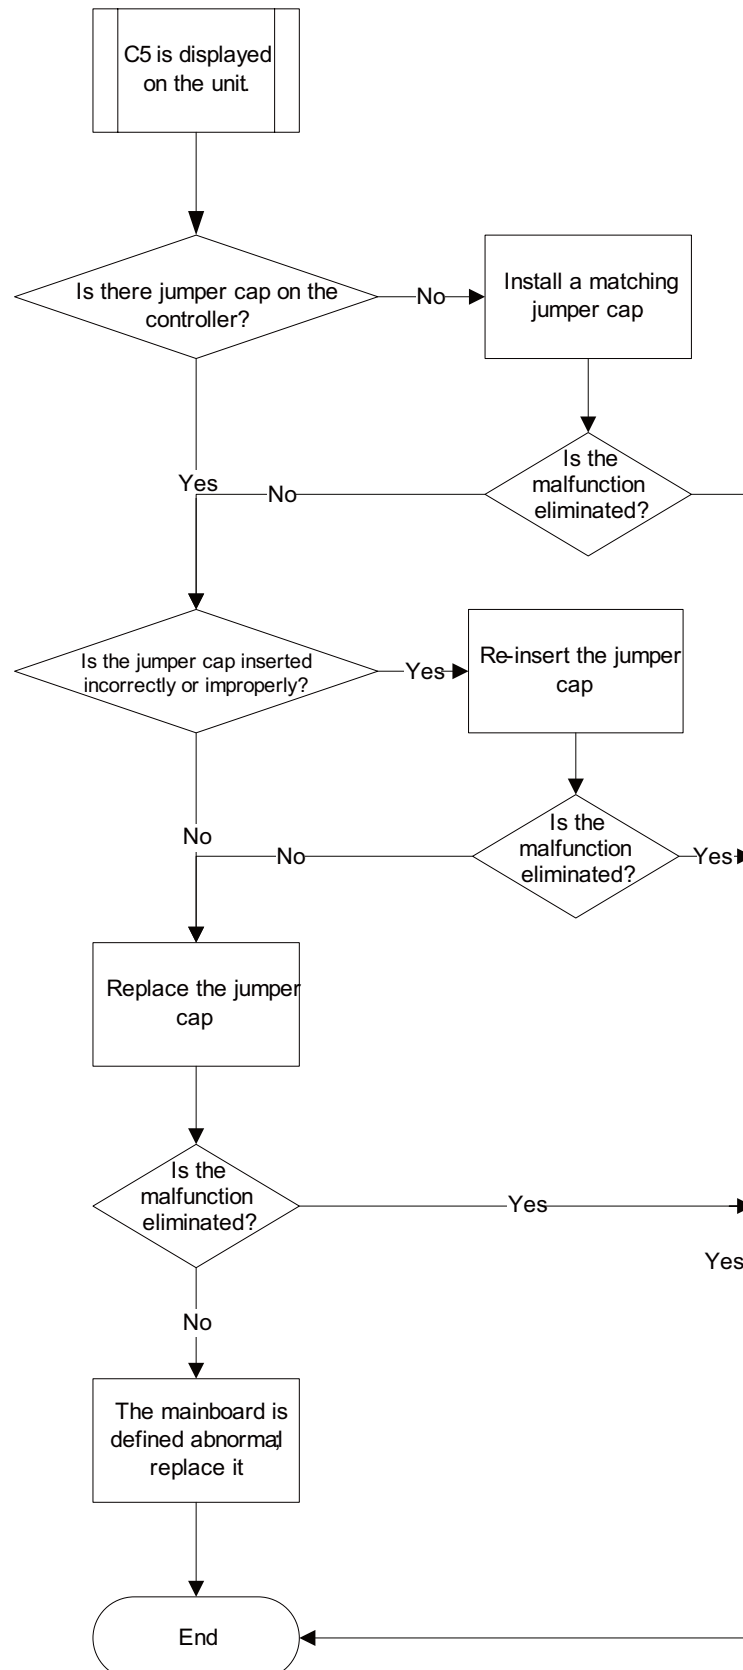


9.2.3 H6 Malfunction

Possible causes:

1. Fan motor is locked;
2. The feedback terminal of PG motor is not connected tightly;
3. The control terminal of PG motor is not connected tightly;
4. Motor is damaged;
5. Malfunction of the rotation speed detection circuit of the mainboard.

See the flow chart below:

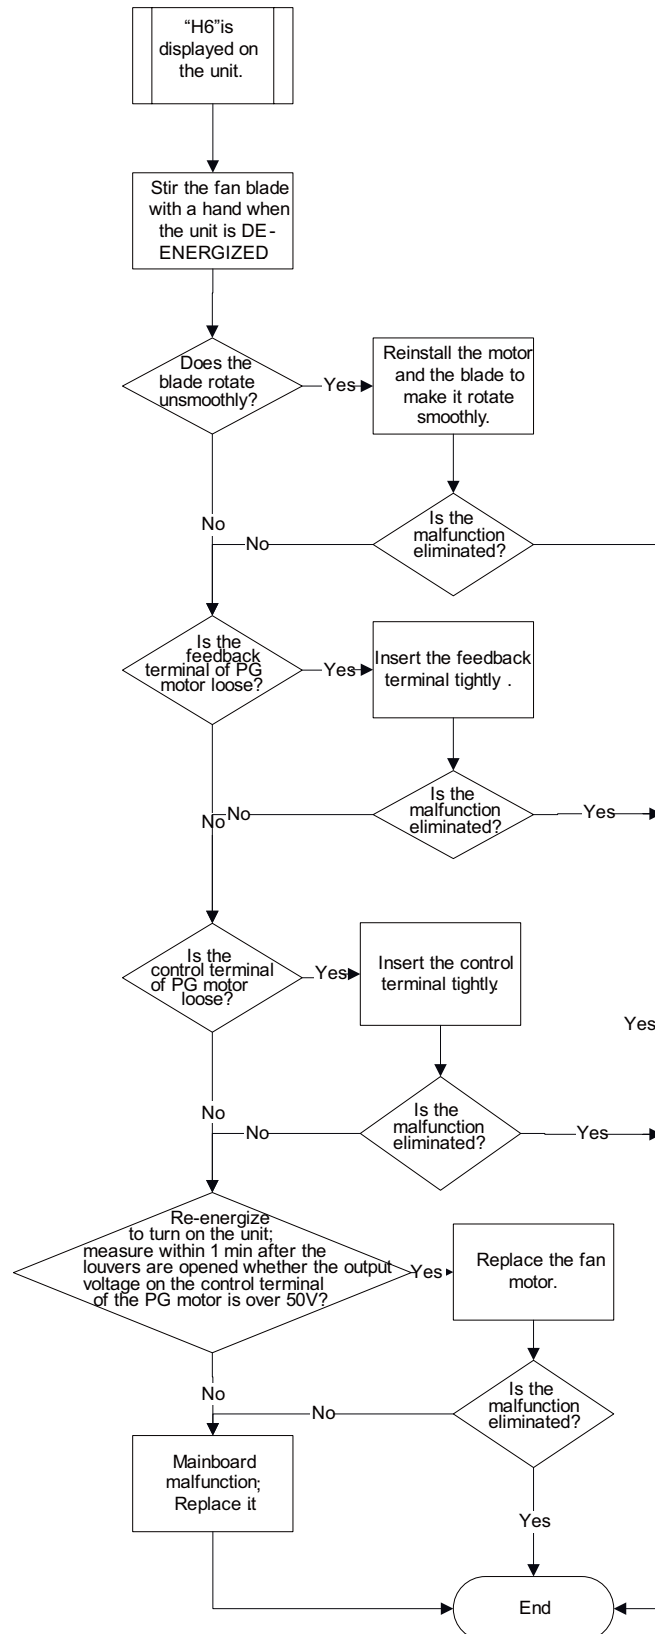


9.2.4 U8 Malfunction

Possible causes:

- 1.The controller diagnoses incorrectly due to instant energization after de-energized while the capacitor discharges slowly;
- 2.Malfunction of the zero-cross detection circuit of the mainboard.

See the flow chart below:

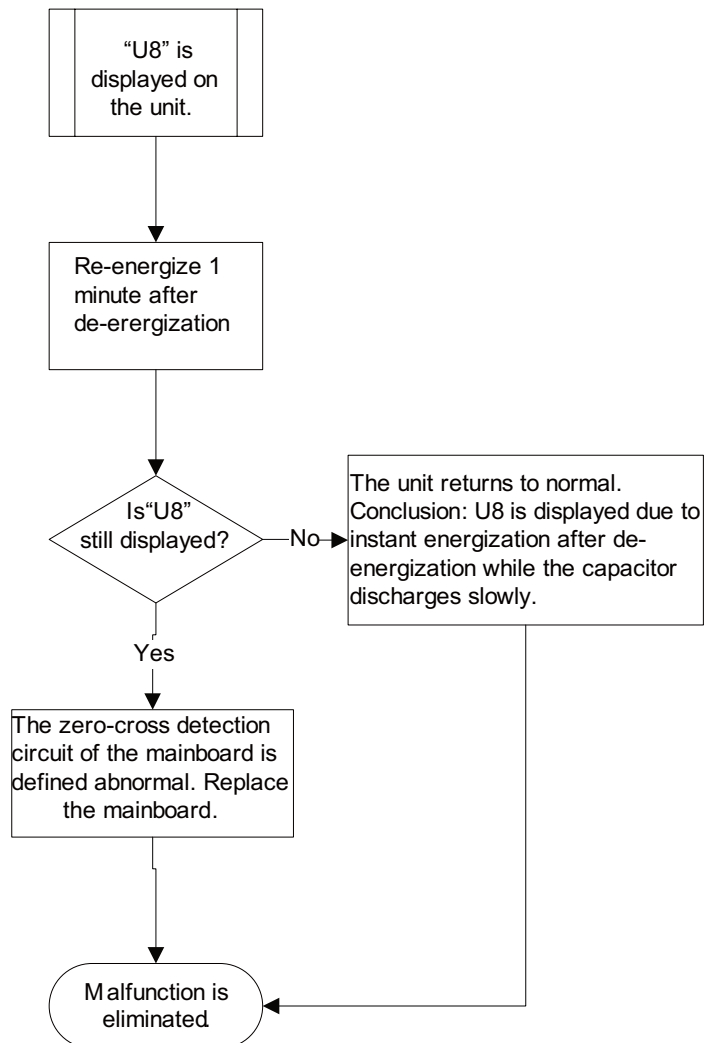



9.2.5 E6 Malfunction

Inspection

1. Check if connection wire between indoor and outdoor units and wire inside the unit are connected well.
2. Check if mainboard of indoor or outdoor unit is damaged.

Flowchart

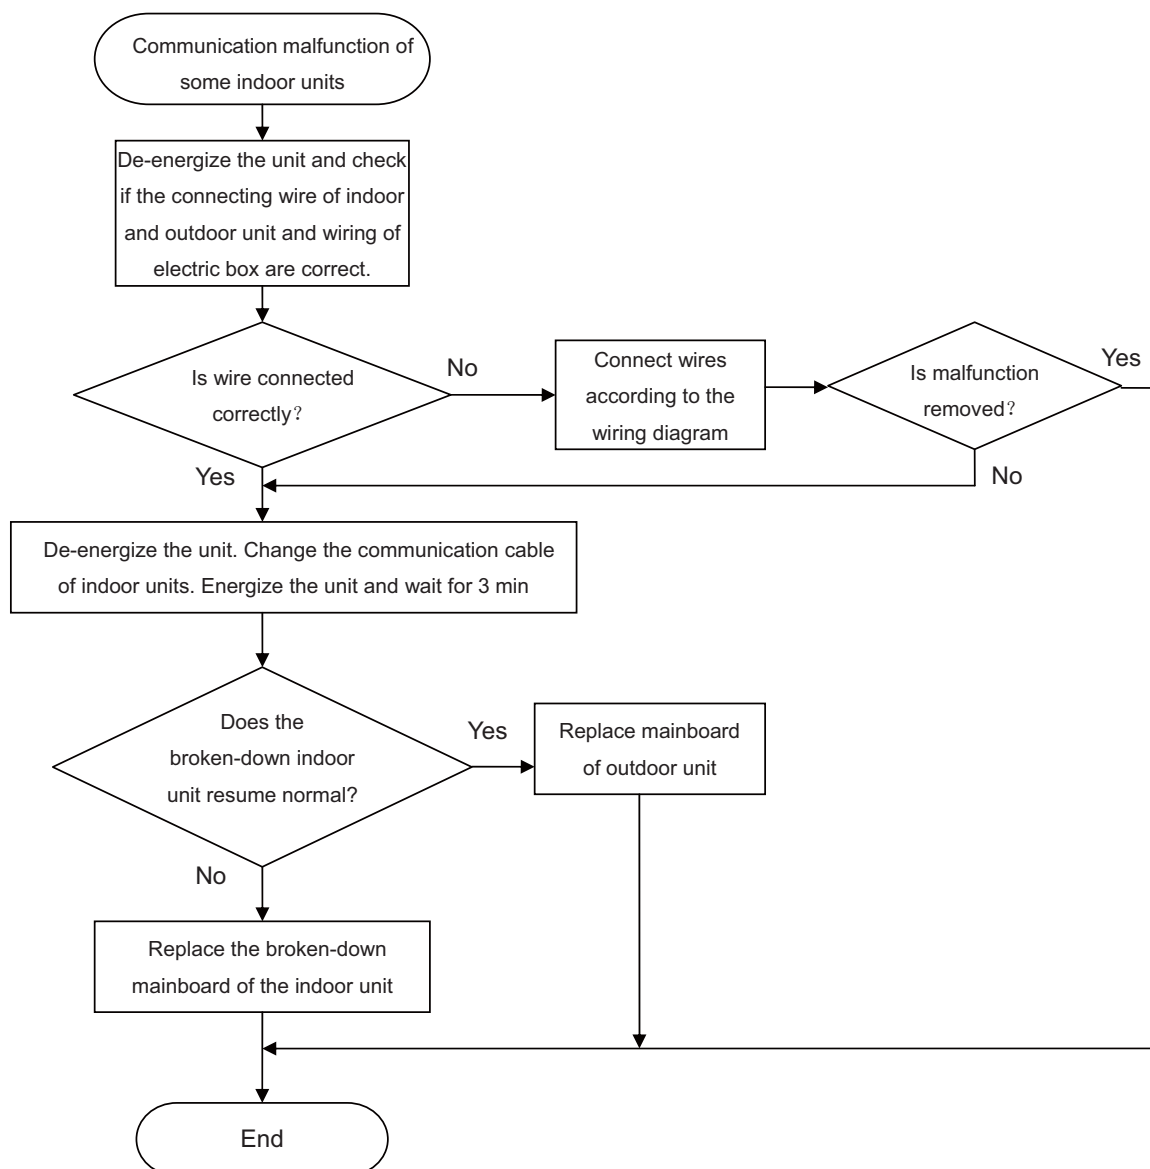

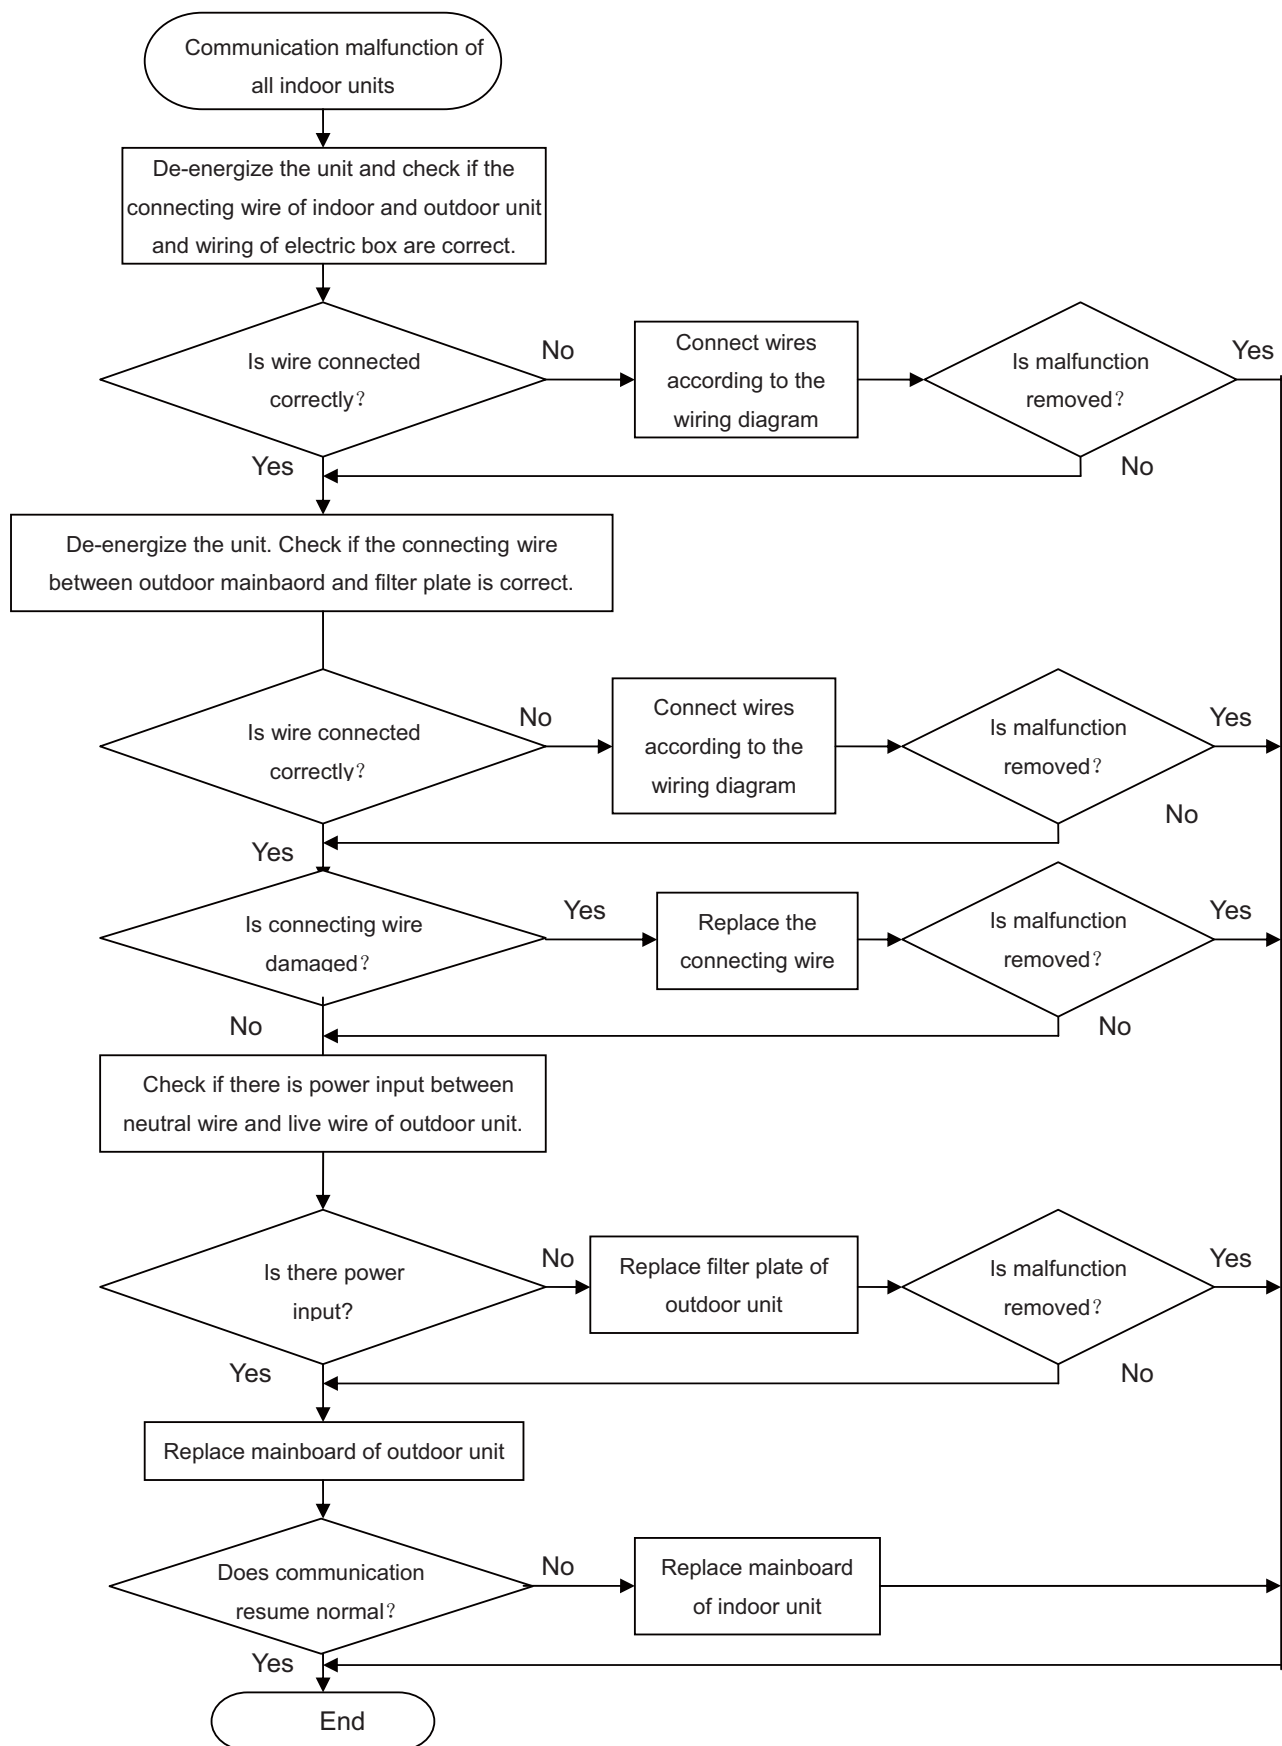

Appendix 1: Resistance Table for Indoor and Outdoor Ambient Temperature Sensors (15K)

| Temp.(°C) | Resistance(kΩ) | Temp.(°C) | Resistance(kΩ) | Temp.(°C) | Resistance(kΩ) | Temp.(°C) | Resistance(kΩ) |
|-------------|----------------|-------------|----------------|-------------|----------------|-------------|----------------|
| -19 | 138.1 | 20 | 18.75 | 59 | 3.848 | 98 | 1.071 |
| -18 | 128.6 | 21 | 17.93 | 60 | 3.711 | 99 | 1.039 |
| -17 | 121.6 | 22 | 17.14 | 61 | 3.579 | 100 | 1.009 |
| -16 | 115 | 23 | 16.39 | 62 | 3.454 | 101 | 0.98 |
| -15 | 108.7 | 24 | 15.68 | 63 | 3.333 | 102 | 0.952 |
| -14 | 102.9 | 25 | 15 | 64 | 3.217 | 103 | 0.925 |
| -13 | 97.4 | 26 | 14.36 | 65 | 3.105 | 104 | 0.898 |
| -12 | 92.22 | 27 | 13.74 | 66 | 2.998 | 105 | 0.873 |
| -11 | 87.35 | 28 | 13.16 | 67 | 2.896 | 106 | 0.848 |
| -10 | 82.75 | 29 | 12.6 | 68 | 2.797 | 107 | 0.825 |
| -9 | 78.43 | 30 | 12.07 | 69 | 2.702 | 108 | 0.802 |
| -8 | 74.35 | 31 | 11.57 | 70 | 2.611 | 109 | 0.779 |
| -7 | 70.5 | 32 | 11.09 | 71 | 2.523 | 110 | 0.758 |
| -6 | 66.88 | 33 | 10.63 | 72 | 2.439 | 111 | 0.737 |
| -5 | 63.46 | 34 | 10.2 | 73 | 2.358 | 112 | 0.717 |
| -4 | 60.23 | 35 | 9.779 | 74 | 2.28 | 113 | 0.697 |
| -3 | 57.18 | 36 | 9.382 | 75 | 2.206 | 114 | 0.678 |
| -2 | 54.31 | 37 | 9.003 | 76 | 2.133 | 115 | 0.66 |
| -1 | 51.59 | 38 | 8.642 | 77 | 2.064 | 116 | 0.642 |
| 0 | 49.02 | 39 | 8.297 | 78 | 1.997 | 117 | 0.625 |
| 1 | 46.6 | 40 | 7.967 | 79 | 1.933 | 118 | 0.608 |
| 2 | 44.31 | 41 | 7.653 | 80 | 1.871 | 119 | 0.592 |
| 3 | 42.14 | 42 | 7.352 | 81 | 1.811 | 120 | 0.577 |
| 4 | 40.09 | 43 | 7.065 | 82 | 1.754 | 121 | 0.561 |
| 5 | 38.15 | 44 | 6.791 | 83 | 1.699 | 122 | 0.547 |
| 6 | 36.32 | 45 | 6.529 | 84 | 1.645 | 123 | 0.532 |
| 7 | 34.58 | 46 | 6.278 | 85 | 1.594 | 124 | 0.519 |
| 8 | 32.94 | 47 | 6.038 | 86 | 1.544 | 125 | 0.505 |
| 9 | 31.38 | 48 | 5.809 | 87 | 1.497 | 126 | 0.492 |
| 10 | 29.9 | 49 | 5.589 | 88 | 1.451 | 127 | 0.48 |
| 11 | 28.51 | 50 | 5.379 | 89 | 1.408 | 128 | 0.467 |
| 12 | 27.18 | 51 | 5.197 | 90 | 1.363 | 129 | 0.456 |
| 13 | 25.92 | 52 | 4.986 | 91 | 1.322 | 130 | 0.444 |
| 14 | 24.73 | 53 | 4.802 | 92 | 1.282 | 131 | 0.433 |
| 15 | 23.6 | 54 | 4.625 | 93 | 1.244 | 132 | 0.422 |
| 16 | 22.53 | 55 | 4.456 | 94 | 1.207 | 133 | 0.412 |
| 17 | 21.51 | 56 | 4.294 | 95 | 1.171 | 134 | 0.401 |
| 18 | 20.54 | 57 | 4.139 | 96 | 1.136 | 135 | 0.391 |
| 19 | 19.63 | 58 | 3.99 | 97 | 1.103 | 136 | 0.382 |

| Appendix 2: Resistance Table for Indoor and Outdoor Tube Temperature Sensor (20K) | | | | | | | |
|---|-----------------|------------|-----------------|------------|-----------------|------------|-----------------|
| Temp.(°C) | Resistance (kΩ) | Temp. (°C) | Resistance (kΩ) | Temp. (°C) | Resistance (kΩ) | Temp. (°C) | Resistance (kΩ) |
| -19 | 181.4 | 20 | 25.01 | 59 | 5.13 | 98 | 1.427 |
| -18 | 171.4 | 21 | 23.9 | 60 | 4.948 | 99 | 1.386 |
| -17 | 162.1 | 22 | 22.85 | 61 | 4.773 | 100 | 1.346 |
| -16 | 153.3 | 23 | 21.85 | 62 | 4.605 | 101 | 1.307 |
| -15 | 145 | 24 | 20.9 | 63 | 4.443 | 102 | 1.269 |
| -14 | 137.2 | 25 | 20 | 64 | 4.289 | 103 | 1.233 |
| -13 | 129.9 | 26 | 19.14 | 65 | 4.14 | 104 | 1.198 |
| -12 | 123 | 27 | 18.13 | 66 | 3.998 | 105 | 1.164 |
| -11 | 116.5 | 28 | 17.55 | 67 | 3.861 | 106 | 1.131 |
| -10 | 110.3 | 29 | 16.8 | 68 | 3.729 | 107 | 1.099 |
| -9 | 104.6 | 30 | 16.1 | 69 | 3.603 | 108 | 1.069 |
| -8 | 99.13 | 31 | 15.43 | 70 | 3.481 | 109 | 1.039 |
| -7 | 94 | 32 | 14.79 | 71 | 3.364 | 110 | 1.01 |
| -6 | 89.17 | 33 | 14.18 | 72 | 3.252 | 111 | 0.983 |
| -5 | 84.61 | 34 | 13.59 | 73 | 3.144 | 112 | 0.956 |
| -4 | 80.31 | 35 | 13.04 | 74 | 3.04 | 113 | 0.93 |
| -3 | 76.24 | 36 | 12.51 | 75 | 2.94 | 114 | 0.904 |
| -2 | 72.41 | 37 | 12 | 76 | 2.844 | 115 | 0.88 |
| -1 | 68.79 | 38 | 11.52 | 77 | 2.752 | 116 | 0.856 |
| 0 | 65.37 | 39 | 11.06 | 78 | 2.663 | 117 | 0.833 |
| 1 | 62.13 | 40 | 10.62 | 79 | 2.577 | 118 | 0.811 |
| 2 | 59.08 | 41 | 10.2 | 80 | 2.495 | 119 | 0.77 |
| 3 | 56.19 | 42 | 9.803 | 81 | 2.415 | 120 | 0.769 |
| 4 | 53.46 | 43 | 9.42 | 82 | 2.339 | 121 | 0.746 |
| 5 | 50.87 | 44 | 9.054 | 83 | 2.265 | 122 | 0.729 |
| 6 | 48.42 | 45 | 8.705 | 84 | 2.194 | 123 | 0.71 |
| 7 | 46.11 | 46 | 8.37 | 85 | 2.125 | 124 | 0.692 |
| 8 | 43.92 | 47 | 8.051 | 86 | 2.059 | 125 | 0.674 |
| 9 | 41.84 | 48 | 7.745 | 87 | 1.996 | 126 | 0.658 |
| 10 | 39.87 | 49 | 7.453 | 88 | 1.934 | 127 | 0.64 |
| 11 | 38.01 | 50 | 7.173 | 89 | 1.875 | 128 | 0.623 |
| 12 | 36.24 | 51 | 6.905 | 90 | 1.818 | 129 | 0.607 |
| 13 | 34.57 | 52 | 6.648 | 91 | 1.736 | 130 | 0.592 |
| 14 | 32.98 | 53 | 6.403 | 92 | 1.71 | 131 | 0.577 |
| 15 | 31.47 | 54 | 6.167 | 93 | 1.658 | 132 | 0.563 |
| 16 | 30.04 | 55 | 5.942 | 94 | 1.609 | 133 | 0.549 |
| 17 | 28.68 | 56 | 5.726 | 95 | 1.561 | 134 | 0.535 |
| 18 | 27.39 | 57 | 5.519 | 96 | 1.515 | 135 | 0.521 |
| 19 | 26.17 | 58 | 5.32 | 97 | 1.47 | 136 | 0.509 |

Appendix 3: Resistance Table for Outdoor Discharge Temperature Sensor (50K)

| Temp. (°C) | Resistance (kΩ) | Temp. (°C) | Resistance (kΩ) | Temp. (°C) | Resistance (kΩ) | Temp. (°C) | Resistance (kΩ) |
|------------|-----------------|------------|-----------------|------------|-----------------|------------|-----------------|
| -29 | 853.5 | 10 | 98 | 49 | 18.34 | 88 | 4.754 |
| -28 | 799.8 | 11 | 93.42 | 50 | 17.65 | 89 | 4.609 |
| -27 | 750 | 12 | 89.07 | 51 | 16.99 | 90 | 4.469 |
| -26 | 703.8 | 13 | 84.95 | 52 | 16.36 | 91 | 4.334 |
| -25 | 660.8 | 14 | 81.05 | 53 | 15.75 | 92 | 4.204 |
| -24 | 620.8 | 15 | 77.35 | 54 | 15.17 | 93 | 4.079 |
| -23 | 580.6 | 16 | 73.83 | 55 | 14.62 | 94 | 3.958 |
| -22 | 548.9 | 17 | 70.5 | 56 | 14.09 | 95 | 3.841 |
| -21 | 516.6 | 18 | 67.34 | 57 | 13.58 | 96 | 3.728 |
| -20 | 486.5 | 19 | 64.33 | 58 | 13.09 | 97 | 3.619 |
| -19 | 458.3 | 20 | 61.48 | 59 | 12.62 | 98 | 3.514 |
| -18 | 432 | 21 | 58.77 | 60 | 12.17 | 99 | 3.413 |
| -17 | 407.4 | 22 | 56.19 | 61 | 11.74 | 100 | 3.315 |
| -16 | 384.5 | 23 | 53.74 | 62 | 11.32 | 101 | 3.22 |
| -15 | 362.9 | 24 | 51.41 | 63 | 10.93 | 102 | 3.129 |
| -14 | 342.8 | 25 | 49.19 | 64 | 10.54 | 103 | 3.04 |
| -13 | 323.9 | 26 | 47.08 | 65 | 10.18 | 104 | 2.955 |
| -12 | 306.2 | 27 | 45.07 | 66 | 9.827 | 105 | 2.872 |
| -11 | 289.6 | 28 | 43.16 | 67 | 9.489 | 106 | 2.792 |
| -10 | 274 | 29 | 41.34 | 68 | 9.165 | 107 | 2.715 |
| -9 | 259.3 | 30 | 39.61 | 69 | 8.854 | 108 | 2.64 |
| -8 | 245.6 | 31 | 37.96 | 70 | 8.555 | 109 | 2.568 |
| -7 | 232.6 | 32 | 36.38 | 71 | 8.268 | 110 | 2.498 |
| -6 | 220.5 | 33 | 34.88 | 72 | 7.991 | 111 | 2.431 |
| -5 | 209 | 34 | 33.45 | 73 | 7.726 | 112 | 2.365 |
| -4 | 198.3 | 35 | 32.09 | 74 | 7.47 | 113 | 2.302 |
| -3 | 199.1 | 36 | 30.79 | 75 | 7.224 | 114 | 2.241 |
| -2 | 178.5 | 37 | 29.54 | 76 | 6.998 | 115 | 2.182 |
| -1 | 169.5 | 38 | 28.36 | 77 | 6.761 | 116 | 2.124 |
| 0 | 161 | 39 | 27.23 | 78 | 6.542 | 117 | 2.069 |
| 1 | 153 | 40 | 26.15 | 79 | 6.331 | 118 | 2.015 |
| 2 | 145.4 | 41 | 25.11 | 80 | 6.129 | 119 | 1.963 |
| 3 | 138.3 | 42 | 24.13 | 81 | 5.933 | 120 | 1.912 |
| 4 | 131.5 | 43 | 23.19 | 82 | 5.746 | 121 | 1.863 |
| 5 | 125.1 | 44 | 22.29 | 83 | 5.565 | 122 | 1.816 |
| 6 | 119.1 | 45 | 21.43 | 84 | 5.39 | 123 | 1.77 |
| 7 | 113.4 | 46 | 20.6 | 85 | 5.222 | 124 | 1.725 |
| 8 | 108 | 47 | 19.81 | 86 | 5.06 | 125 | 1.682 |
| 9 | 102.8 | 48 | 19.06 | 87 | 4.904 | 126 | 1.64 |

Note: The information above is for reference only.




10. Removal Procedure










Warning





Be sure to wait for a minimum of 10 minutes after turning off all power supplies before disassembly.






Take GWH18UC-D3DNA1A/I for example.

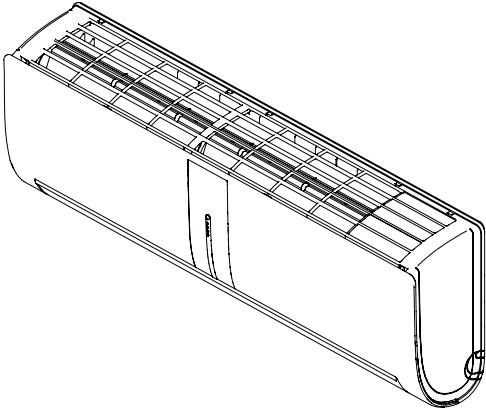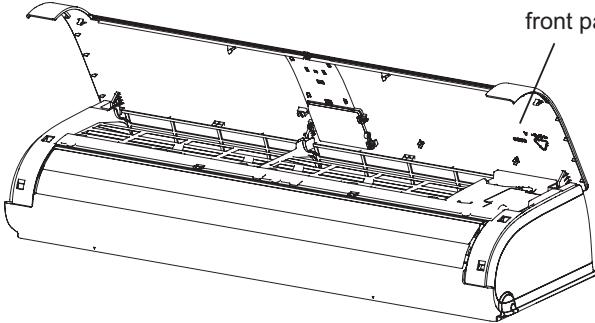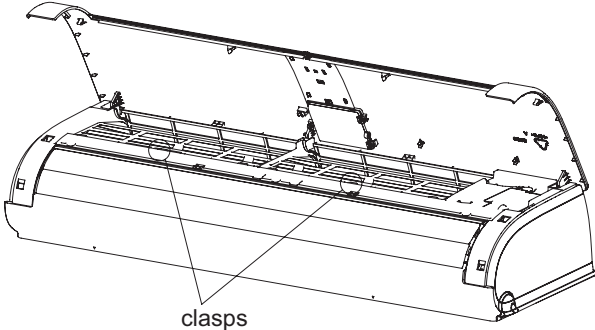
| Steps | Procedure | |
|-----------------------|---|--|
| 1. Before disassembly |  | |
| 2. Remove filter | <div><div><div>1</div><div>Loosen clasps on both sides of front panel and open front panel.</div></div><div><div>2</div><div>Loosen clasps on filter and push the filter inwards. Then lift it up to remove it.</div></div></div>   | |
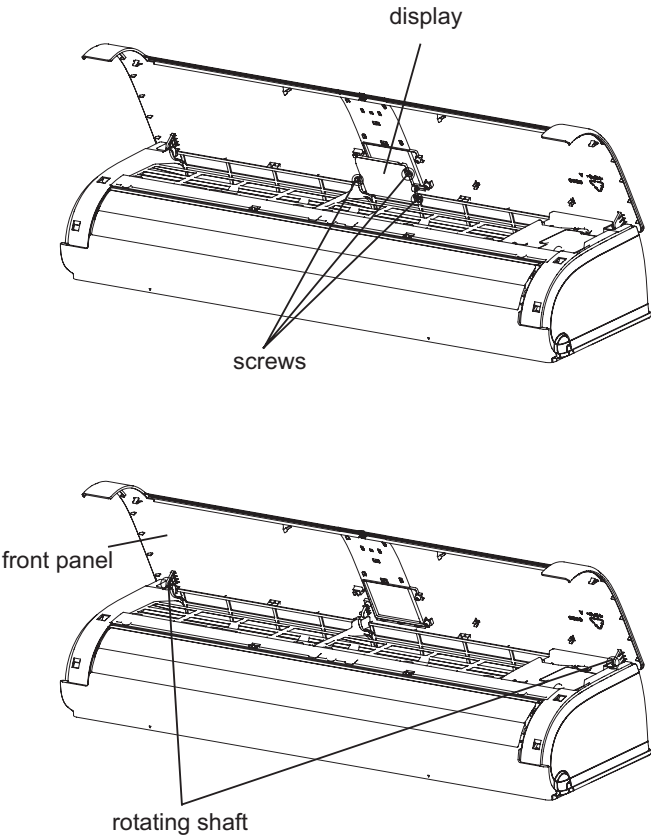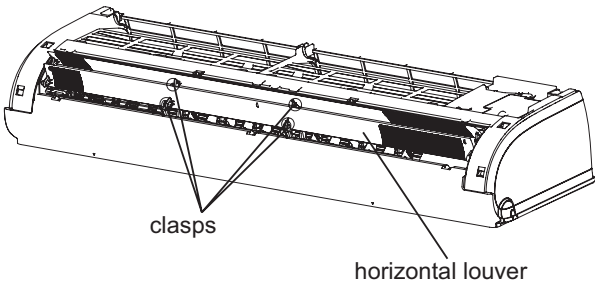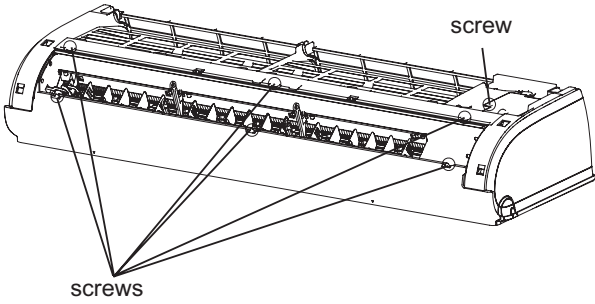
| Steps | Procedure |
|-----------------------------|---|
| 3. Remove front panel |  <p>Remove screws fixing display on front panel. Slide rotating shaft of front panel along the groove to remove the front panel.</p> |
| 4. Remove horizontal louver |  <p>Remove axle sleeve of horizontal louver and bend the horizontal louver. Then draw it outwards to remove it.</p> |
| 5. Remove front case |  <p>Open screw caps and remove 6 screws fixing front case and 1 screw on electric box cover 2.</p> |
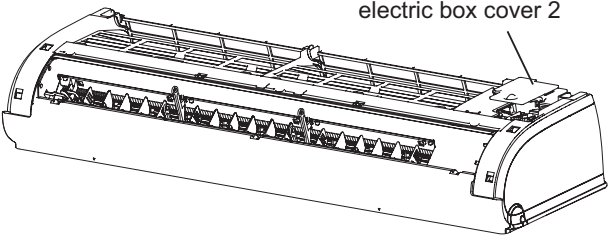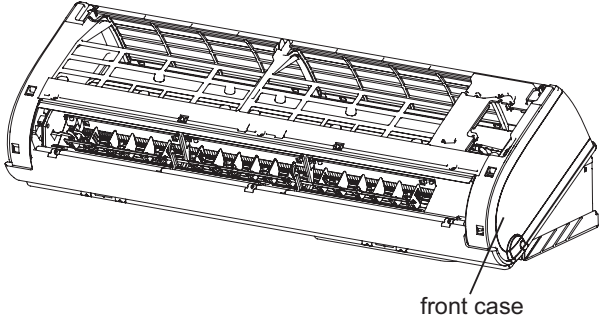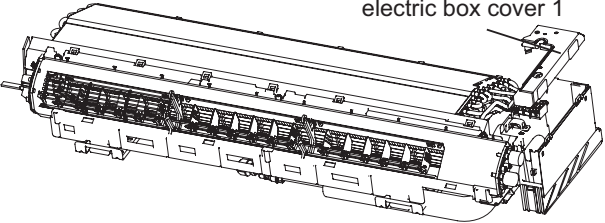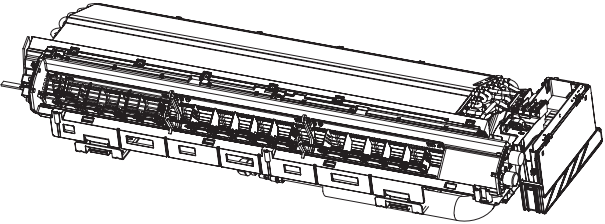
| Steps | Procedure | |
|------------------------------------|--|--|
| 2 | Remove electric box cover 2 |  <p>electric box cover 2</p> |
| 3 | Loosen clasps on the rear of front case. Lift the front case up to remove it. |  <p>front case</p> |
| 6. Remove electric box subassembly | | |
| 1 | Loosen clasps on the joint of electric box cover 1 and electric box. Then remove electric box cover 1. |  <p>electric box cover 1</p> |
| 2 | Unplug splicing ear of motor and step motor inside electric box. |  |
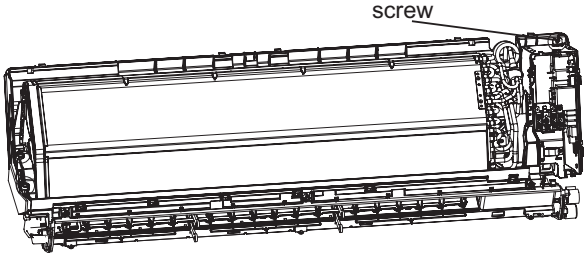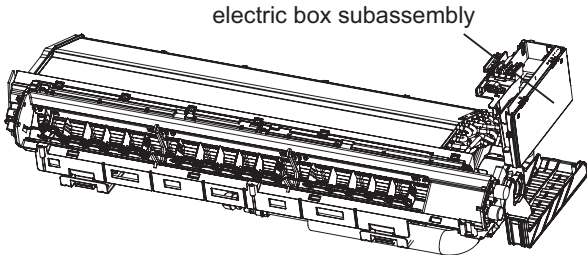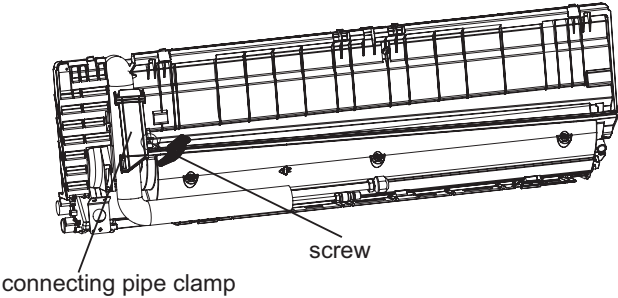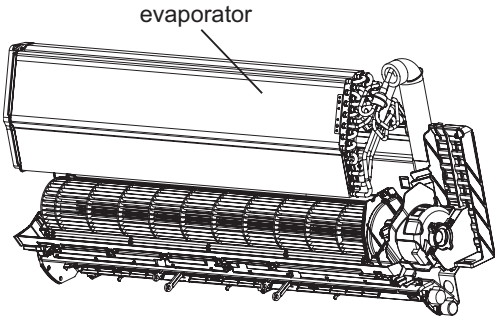
| Steps | Procedure | |
|----------------------|--|--|
| 3 | Remove screw fixing electric box. |  <p>A perspective view of the rear case of a vehicle. A line points to a screw located on the right side, which is used to secure the electric box subassembly.</p> |
| 4 | Remove electric box subassembly. |  <p>A perspective view of the rear case with the electric box subassembly partially detached. A line points to the subassembly, which is being lifted away from the rear case.</p> |
| 7. Remove evaporator | | |
| 1 | Remove screws on connecting pipe clamp and then remove the connecting pipe clamp. |  <p>A perspective view of the rear case. A line points to a clamp on the left side of the case. Another line points to a screw on the right side of the case. The clamp is being removed from the case.</p> |
| 2 | Remove screws on the joint of evaporator and rear case. Slightly adjust pipe of evaporator and then remove evaporator. |  <p>A perspective view of the rear case with the evaporator removed. A line points to the evaporator, which is a long, cylindrical component with a coiled pipe. The evaporator is being lifted away from the rear case.</p> |
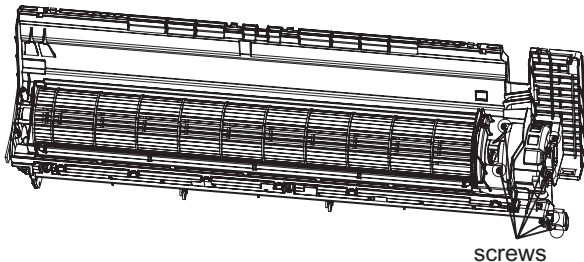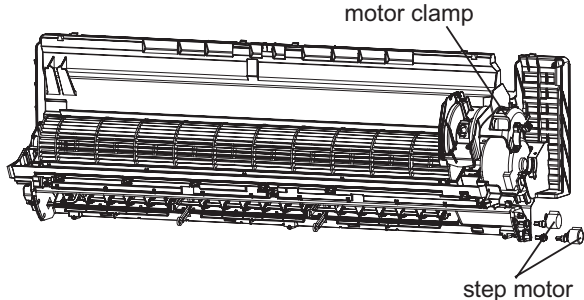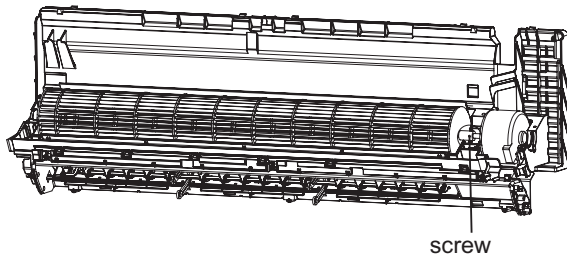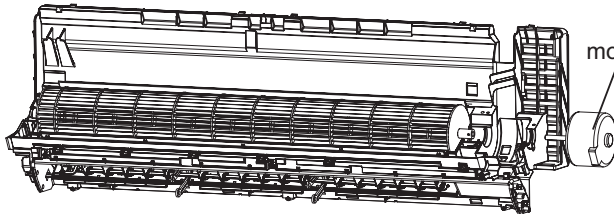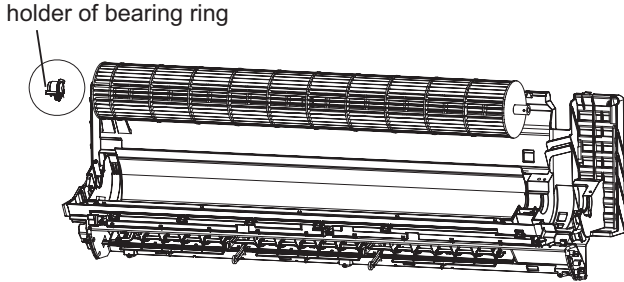
| Steps | Procedure | |
|--|---|---|
| 8. Remove cross flow fan blade and motor | | |
| 1 | Remove screws fixing motor clamp and step motor. |  <p>screws</p> |
| 2 | Remove motor clamp and step motor. |  <p>motor clamp</p> <p>step motor</p> |
| 3 | Remove screws on the joint of cross flow fan blade and motor. |  <p>screw</p> |
| 4 | Remove motor. |  <p>motor</p> |
| 5 | Unplug holder of bearing ring. |  <p>holder of bearing ring</p> |
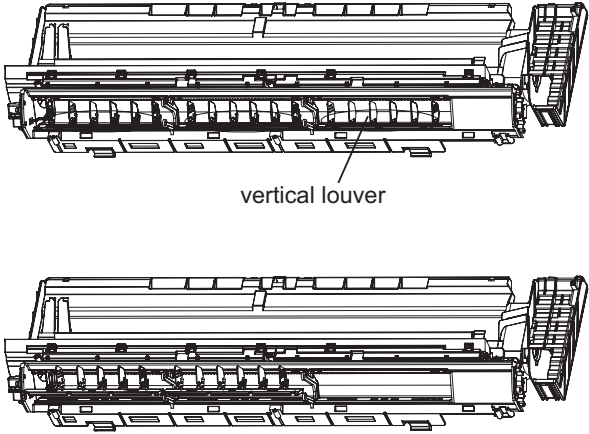
| Steps | Procedure | |
|---------------------------|--|--|
| 9. Remove vertical louver |  | |
| | | |

JF00301470

GREE ELECTRIC APPLIANCES, INC. OF ZHUHAI

Add: West Jinji Rd, Qianshan, Zhuhai, Guangdong, China, 519070

Tel: (+86-756) 8522218 Fax: (+86-756) 8669426

E-mail: gree@gree.com.cn www.gree.com

For continuous improvement in the products, Gree reserves the right to modify the product specification and appearance in this manual without notice and without incurring any obligations.